



installation

- surface mounted (classic)
- surface mounted flush with floor

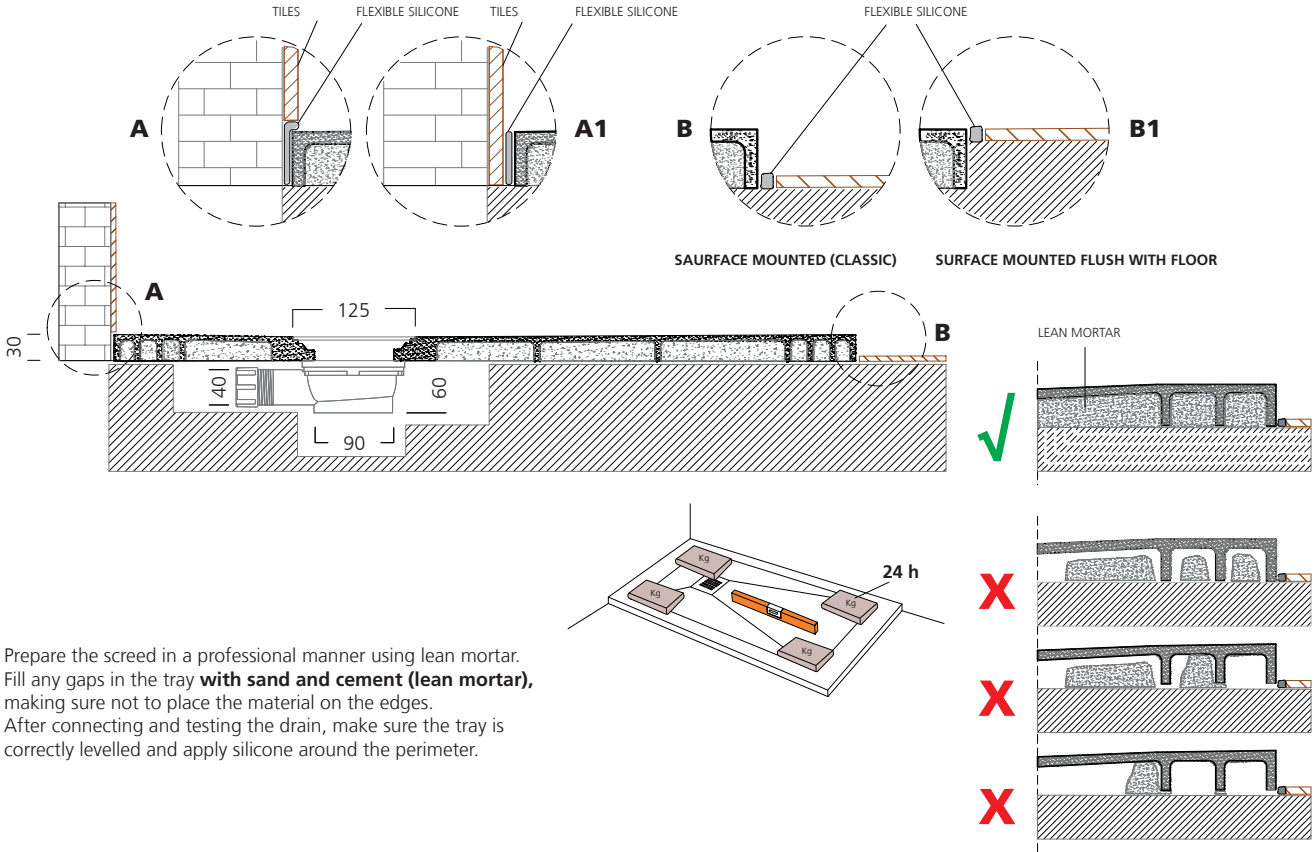

Prepare the screed in a professional manner using lean mortar. Fill any gaps in the tray **with sand and cement (lean mortar)**, making sure not to place the material on the edges. After connecting and testing the drain, make sure the tray is correctly levelled and apply silicone around the perimeter.

- surface mounted on the floor (tiles)

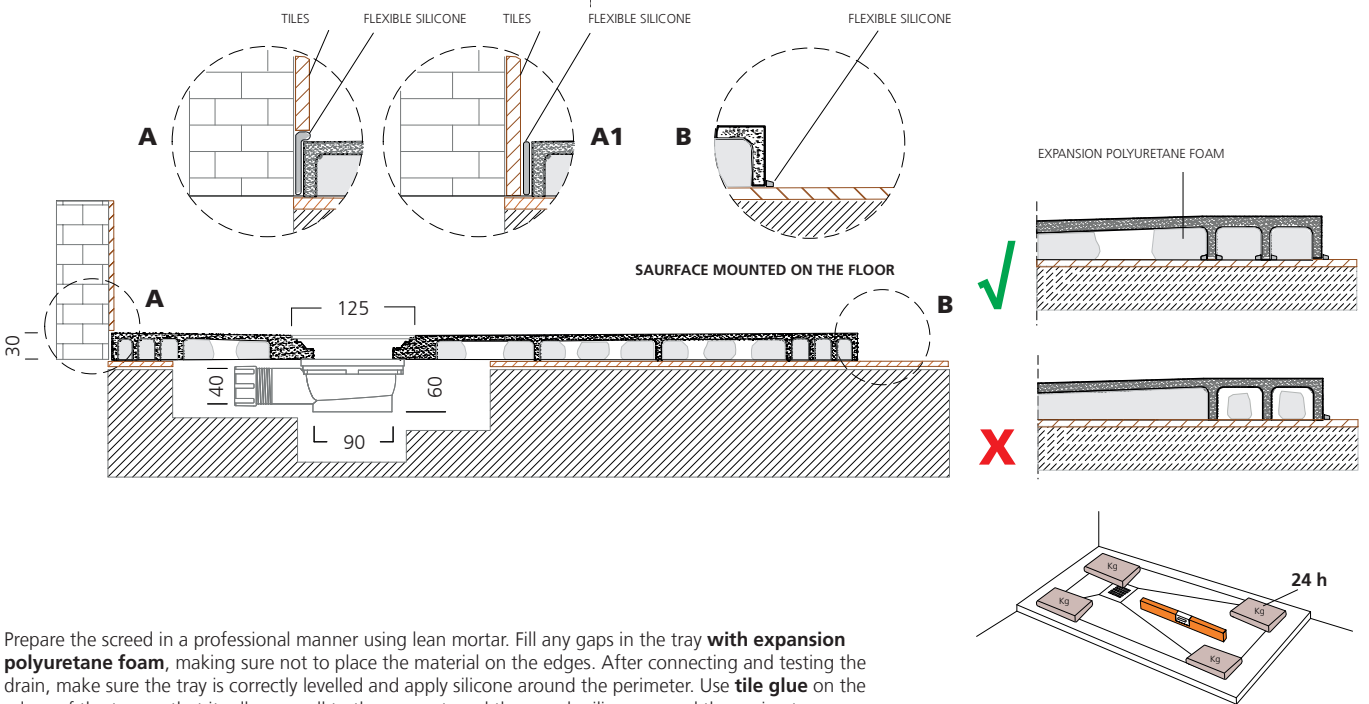

Prepare the screed in a professional manner using lean mortar. Fill any gaps in the tray **with expansion polyuretane foam**, making sure not to place the material on the edges. After connecting and testing the drain, make sure the tray is correctly levelled and apply silicone around the perimeter. Use **tile glue** on the edges of the tray so that it adheres well to the support, and then apply silicon around the perimeter.