

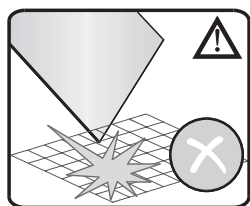
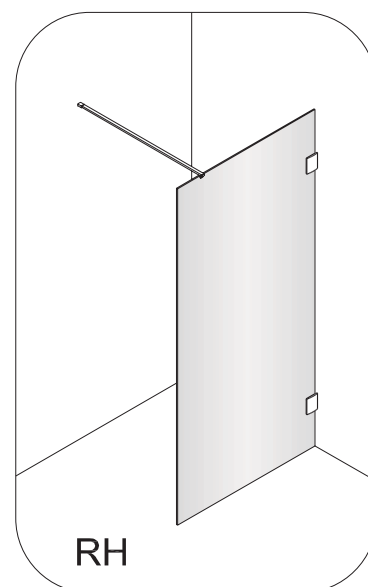
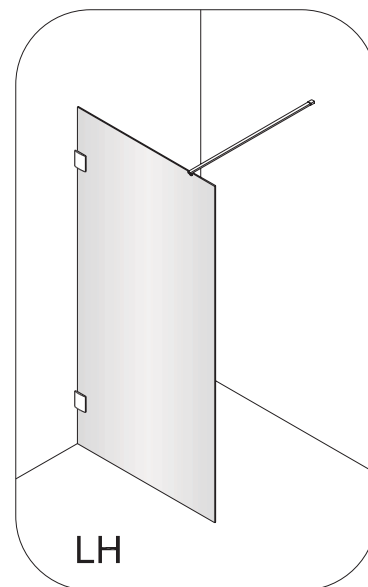


ABR90 ABR10 ABR12

Instruction Manual

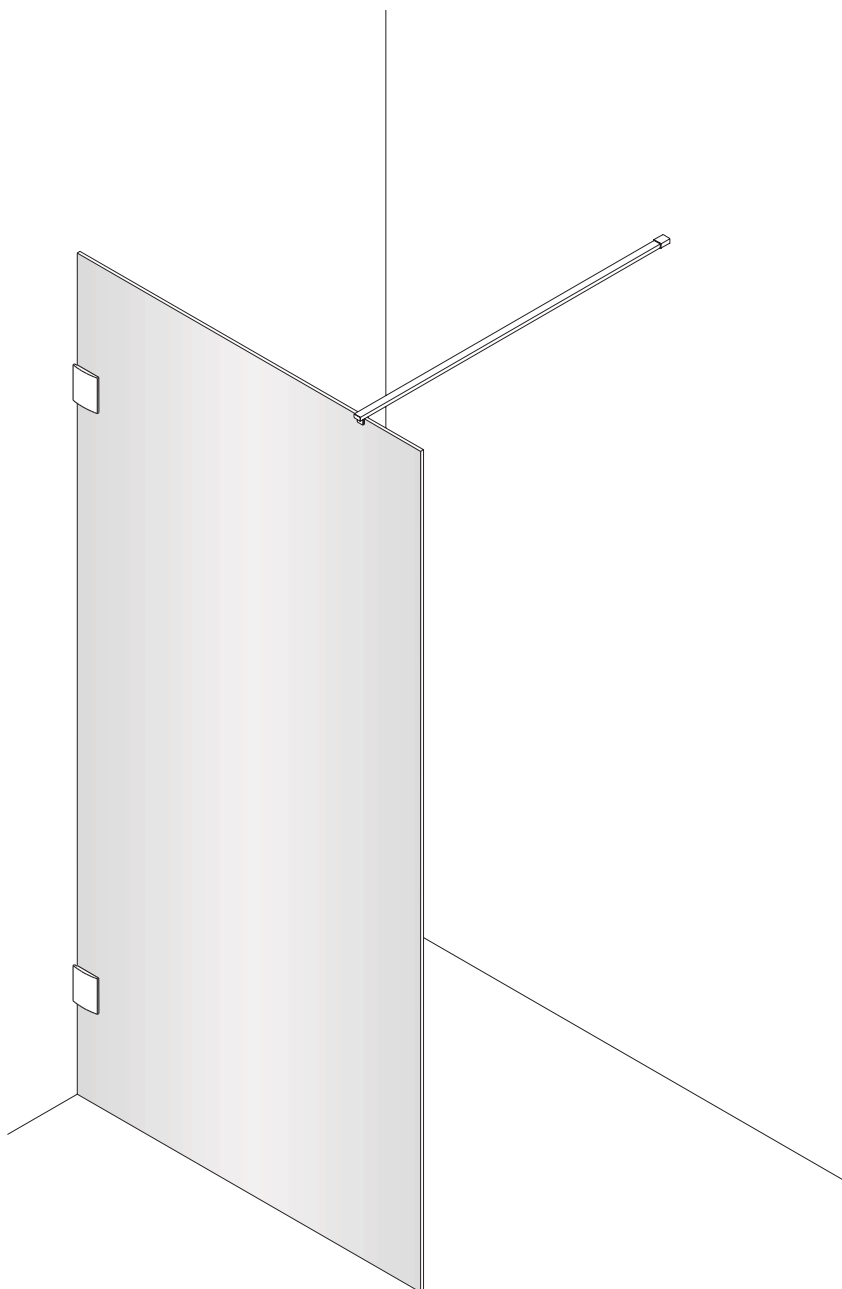


CAUTION ! Tempered glass, handle with care!
No collision to the four corners in case of crazing.

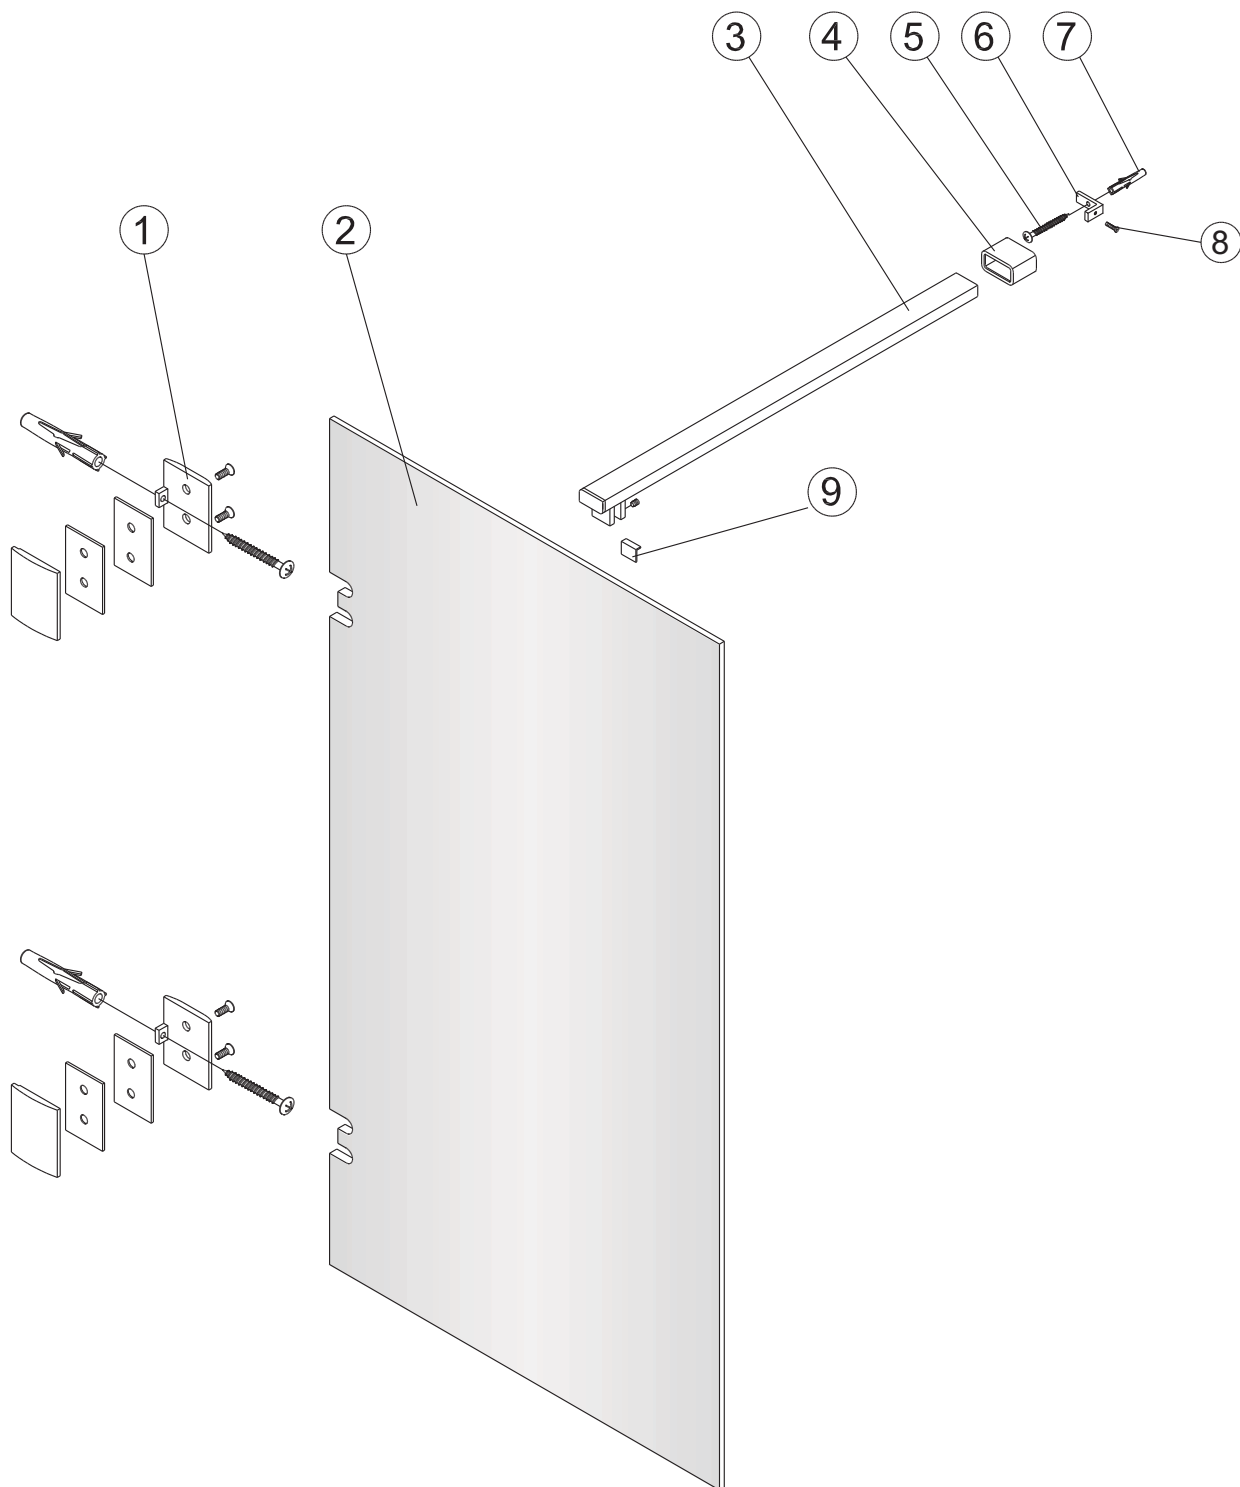


10	
11	

No.	Description	Quantity
1	Glass holder	2
2	Big fixed panel	1
3	Support bar	1
4	Cover for support bar	1
5	ST4X50 Screw	3
6	Wall Bracket	1
7	Wall Plug	3
8	M4X14 Screw	1
9	Mat	1
10	Hexangular Spanner(4mm)	1
11	Setting wedge	4

TOOLS REQUIRED

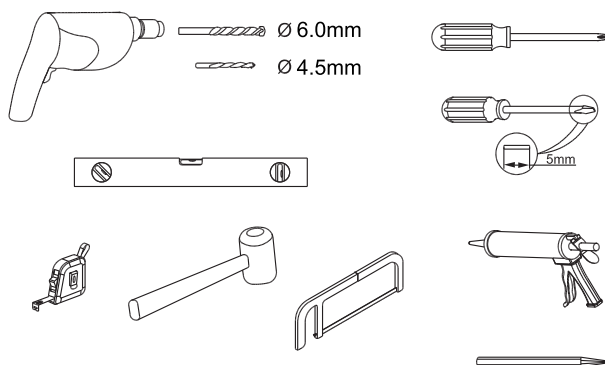

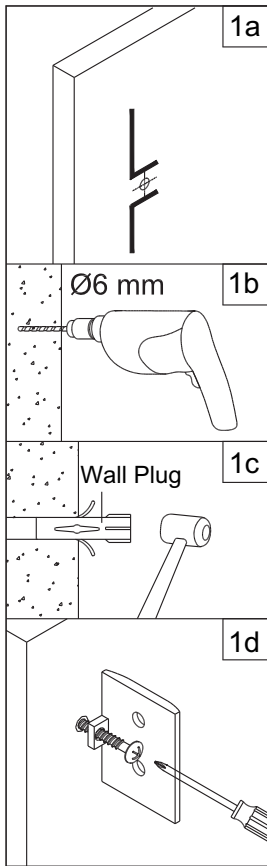


①




This side with easy clean treatment, please put this side to inside of shower enclosure.

max.980mm !

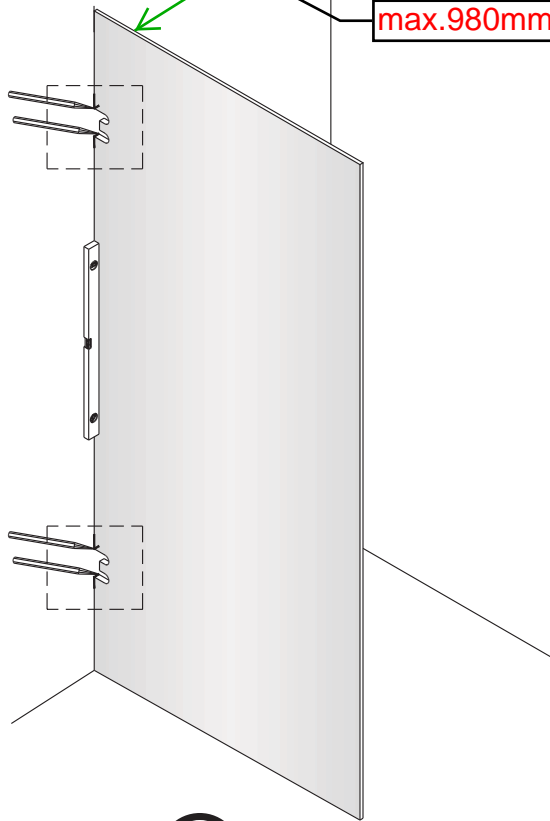

②

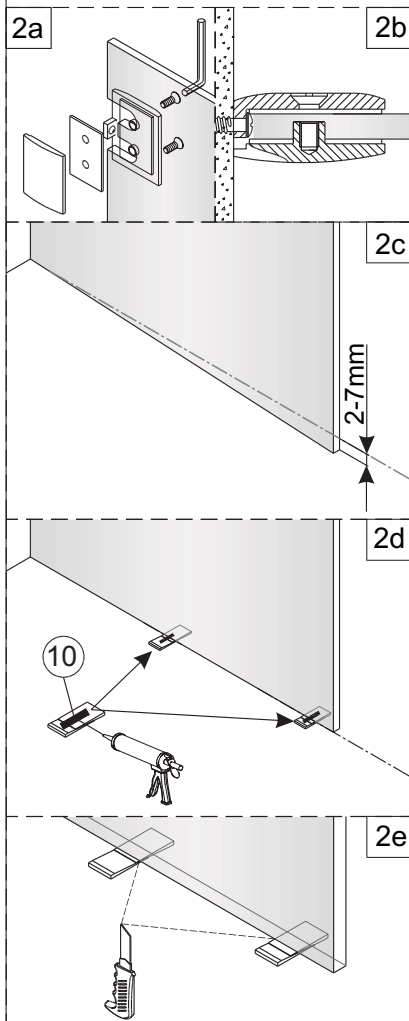

The setting wedge(No.10) will be needed if the door is not level in 2-7mm.

Put silicone on the two wedges and place them under the door to level the door.

Cut the redundant part along the rim of glass.

