


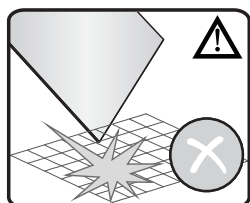
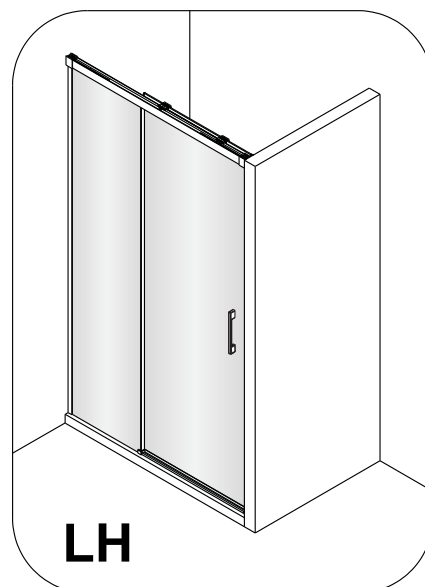













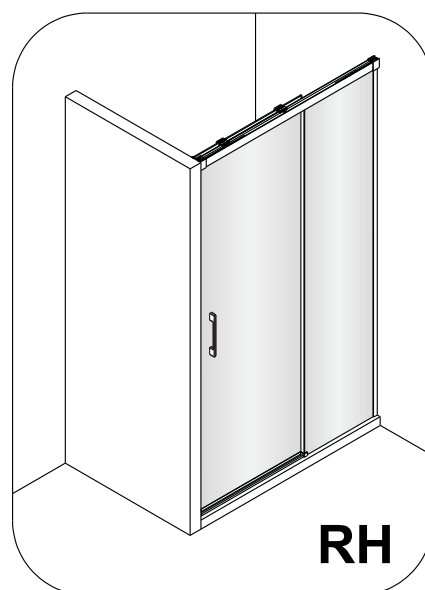

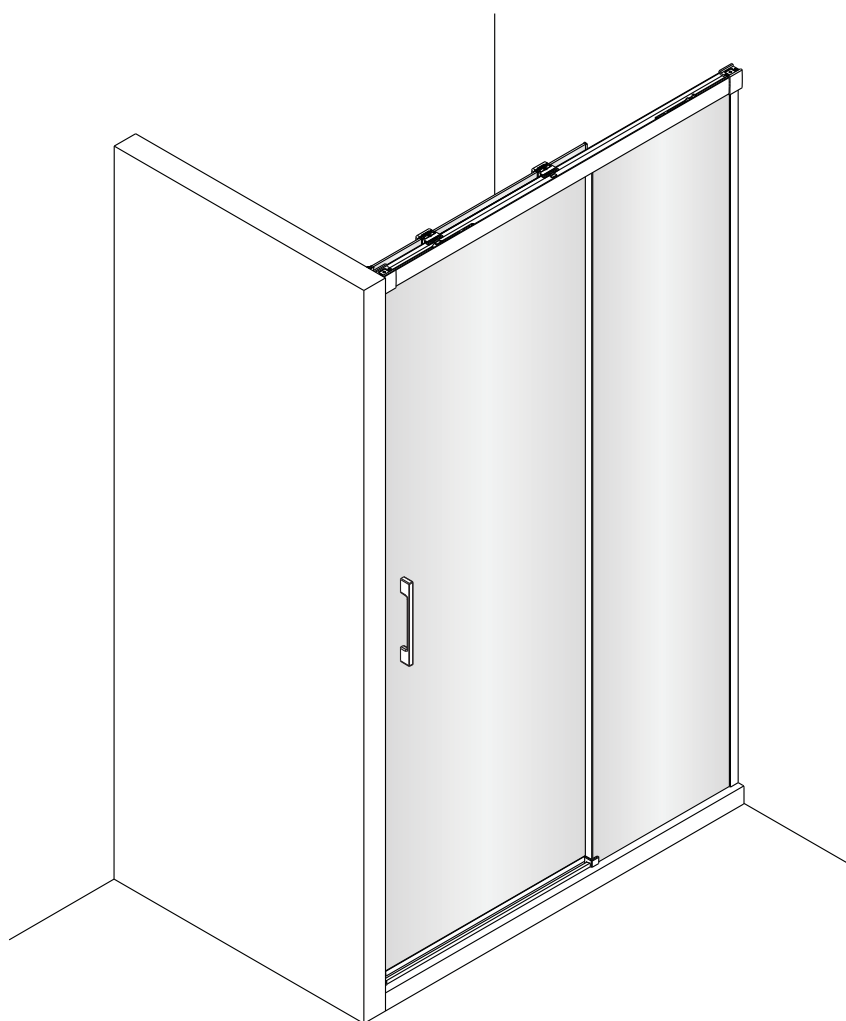

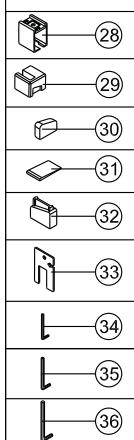




















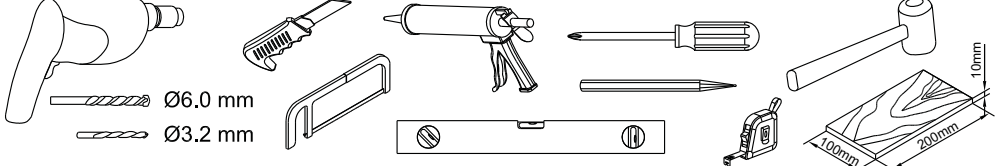
CSP12X Instruction Manual





CAUTION! Tempered glass, handle with care!

No collision to the four corners in case of crazing.



1  x1	2  x1	3  x1	4  x1	5  x1	6  x1	7  x1	8  x1	9  x1	10  x1	11  x1
12  x1	13  x1	14  x3	15  x6	16  x1	17  x2	18  x2	19  x1	20  x2	21  x4	22  x2
23  x1	24  x1	25  x1	26  x1	27  x1	28  x1	29  x1	30  x1	31  x4	32  x1	33  x1
34  x1	35  x1	36  x1								

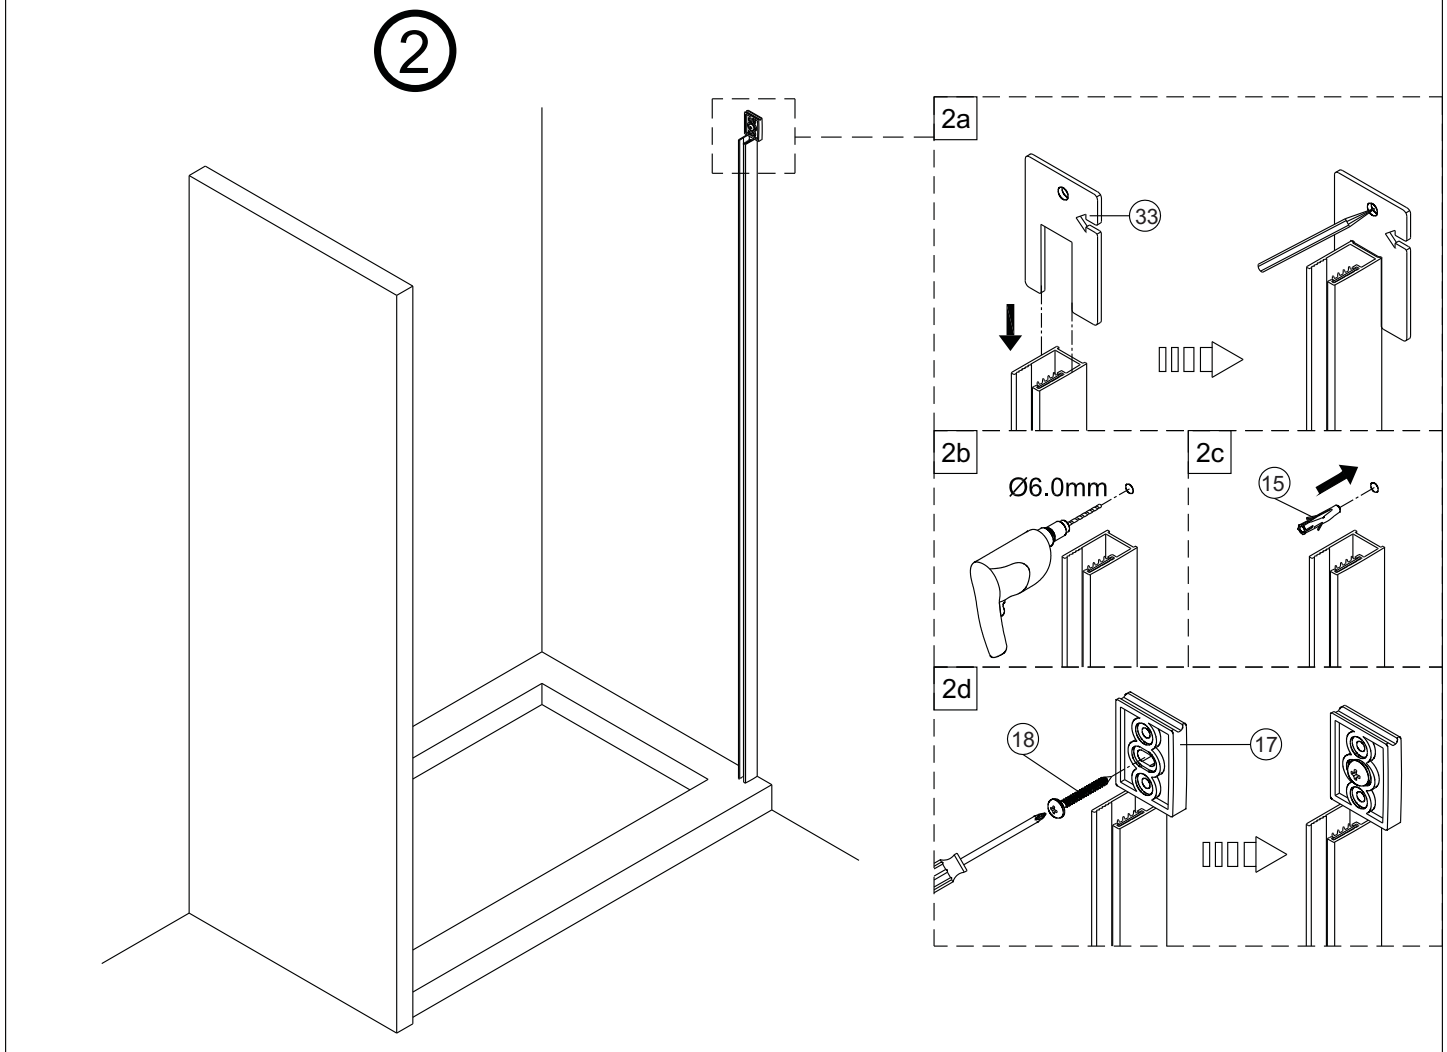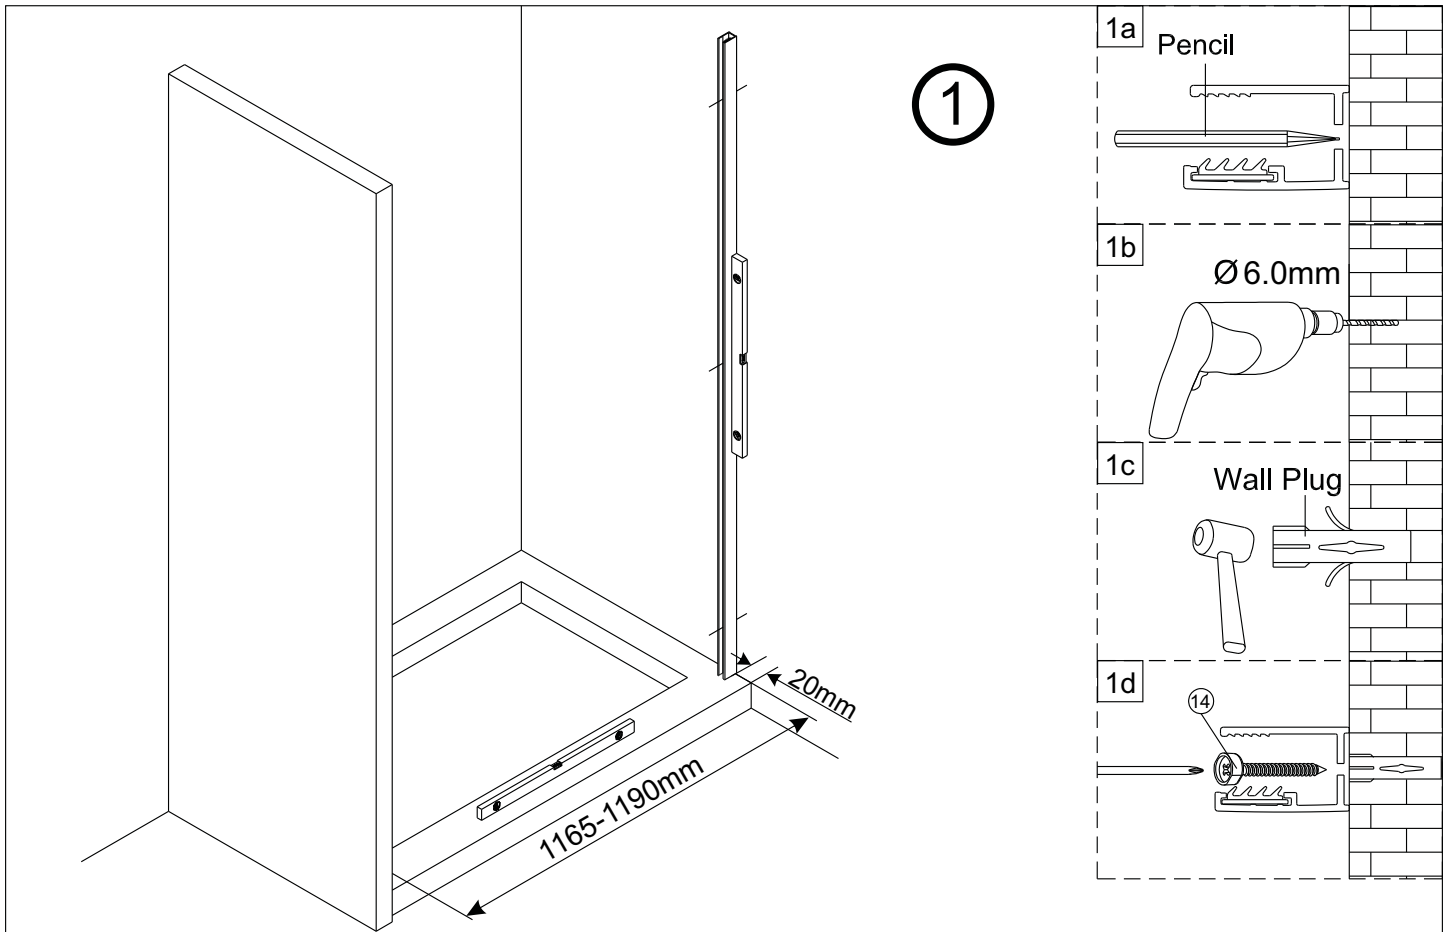



This side with easy clean treatment, please put this side to inside of shower enclosure.


③

The setting wedge(No.31) will be needed if the door is not level in 2-7mm.


Put silicone on the two wedges and place them under the door to level the door.

Cut the redundant part along the rim of glass.


3a

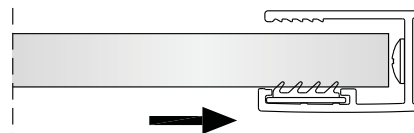


3b

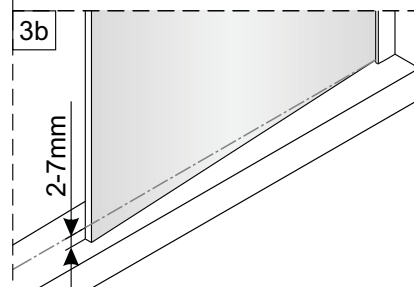

3c

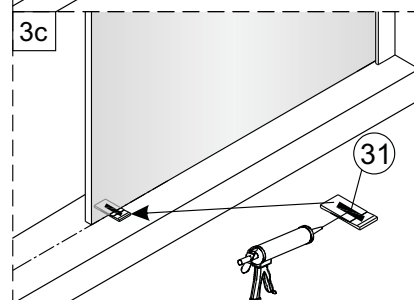


3d

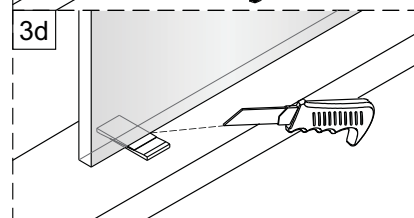


④


4a

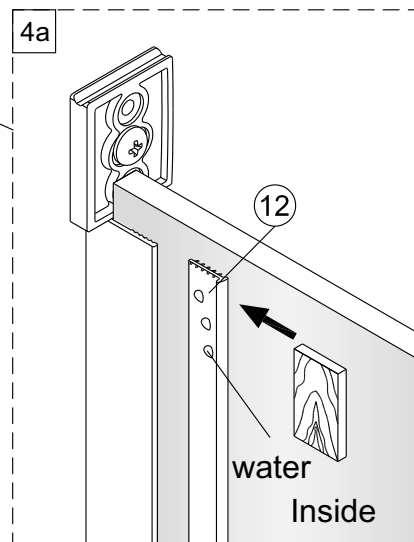



4b


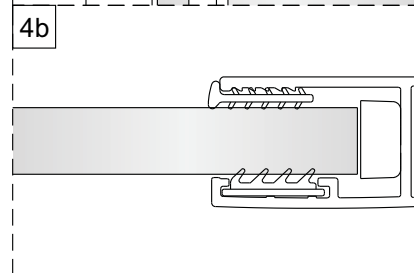


5



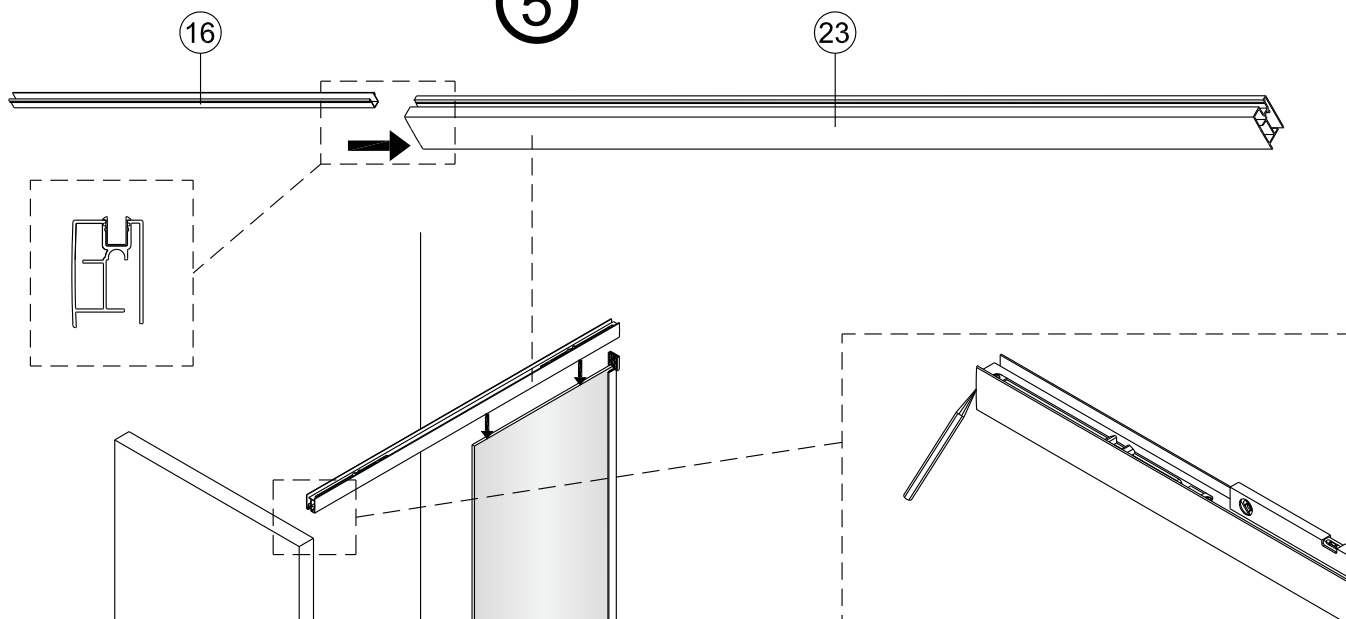


6

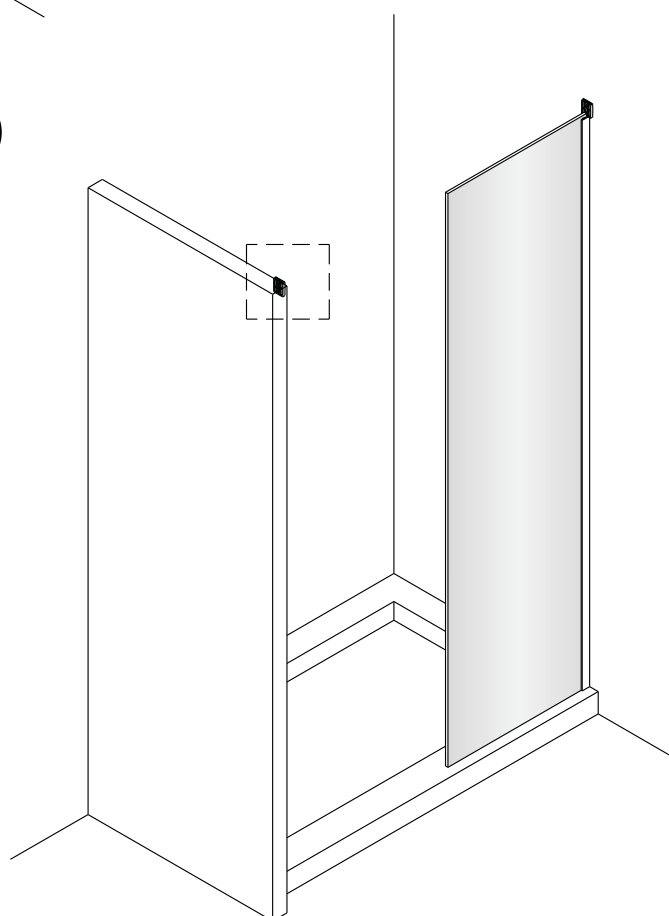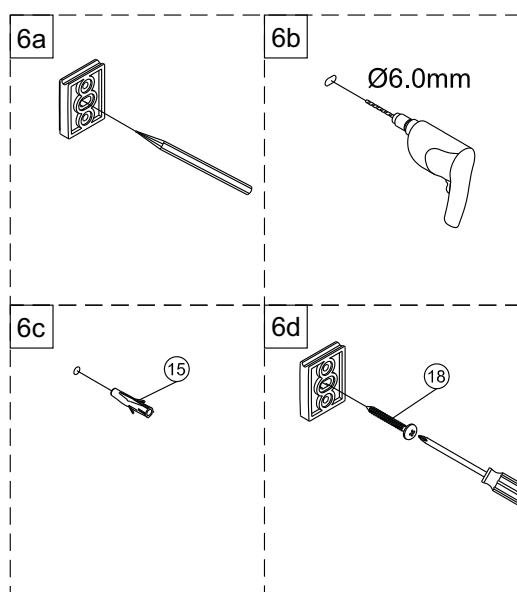

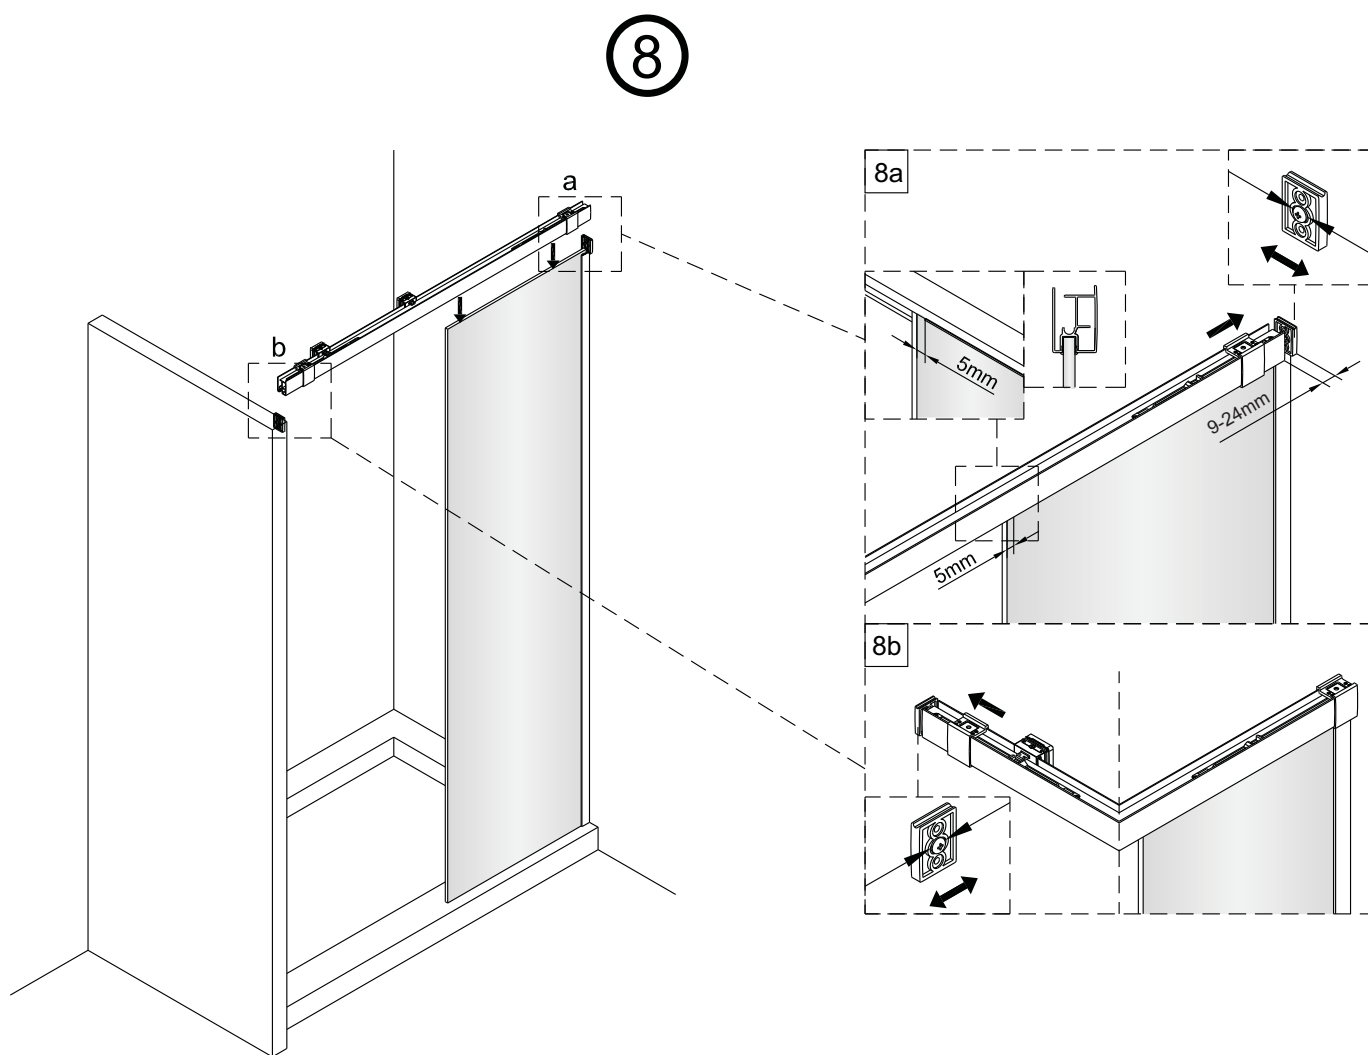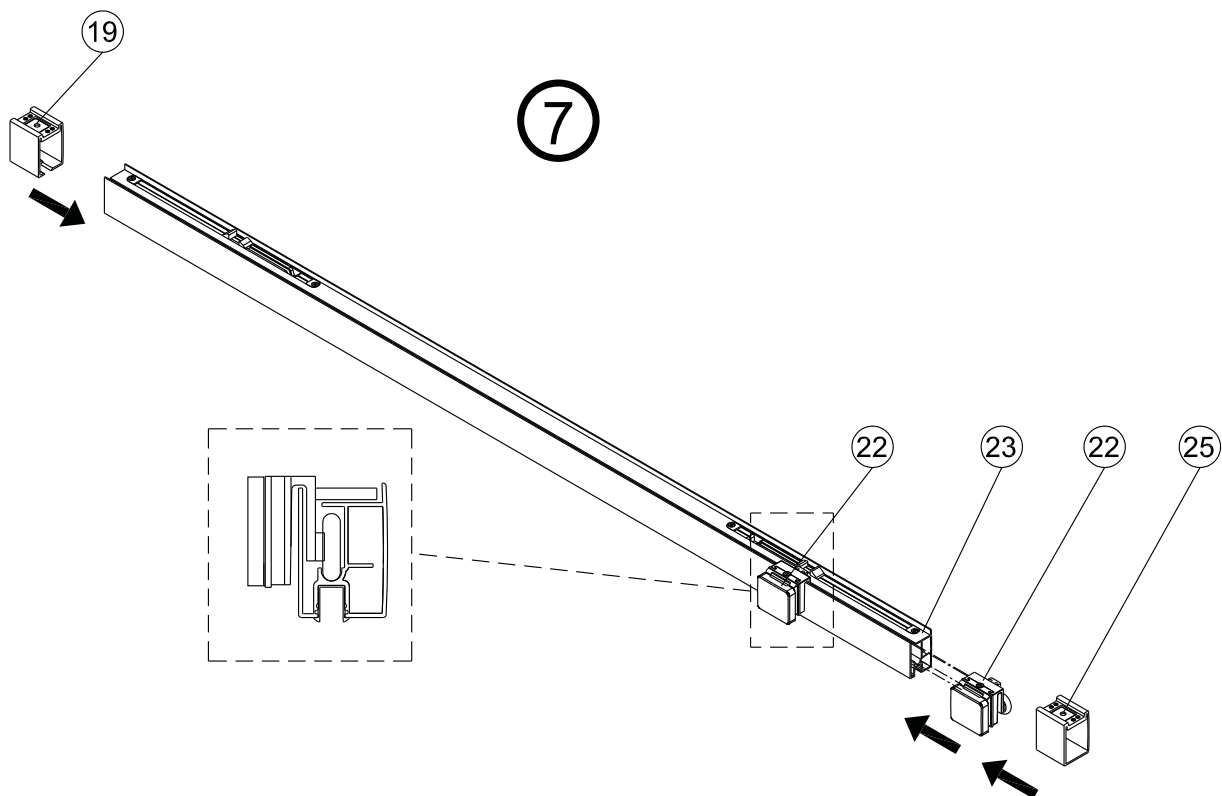


9

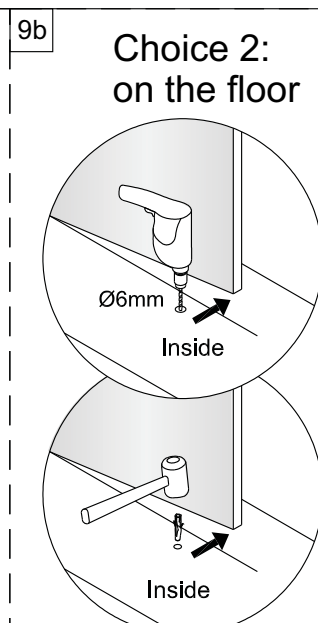
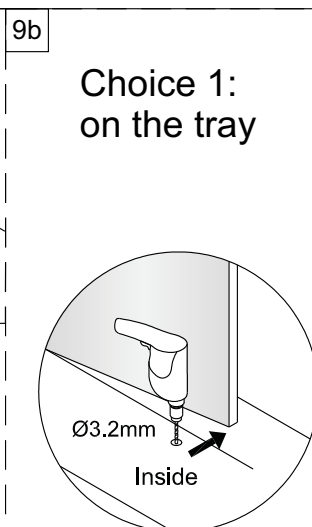
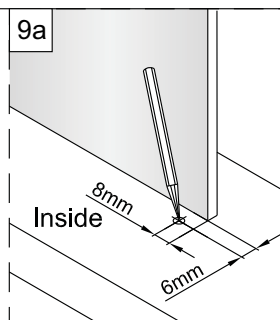


Choice 2:
on the floor





Step a: Insert the
"Big" protector
into the door guide
when the moving
glass use bottom
waterproof strip.

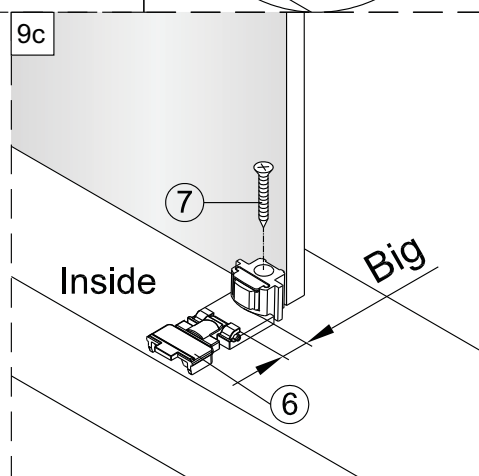


Step b: Insert the
"Small" protector
into the door guide
when the moving
glass does not
use any bottom
waterproof strip.

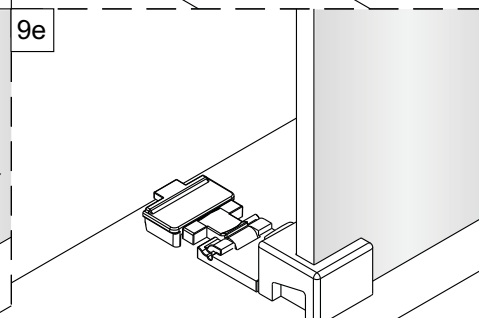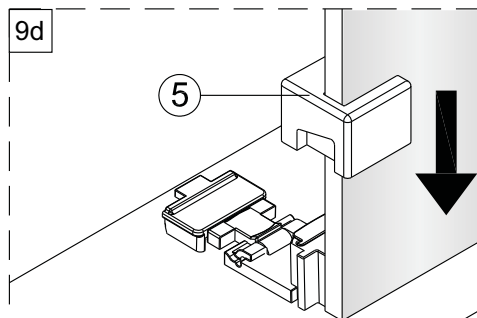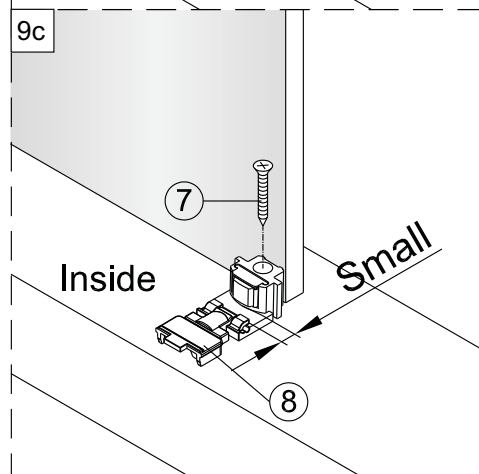



10

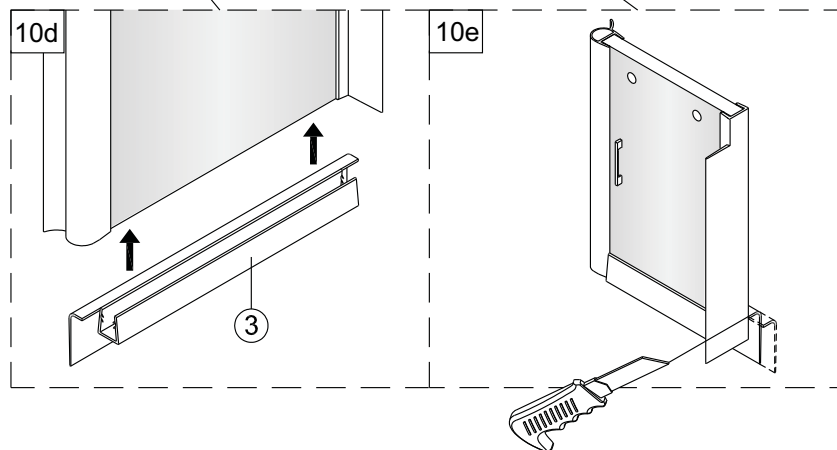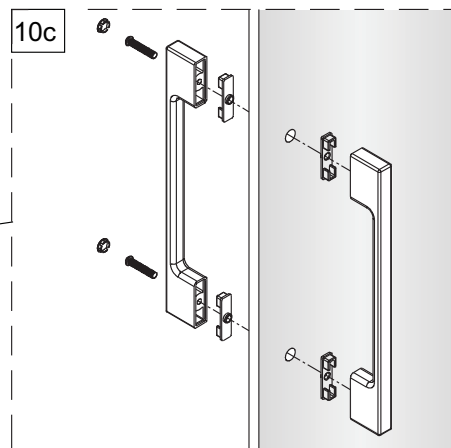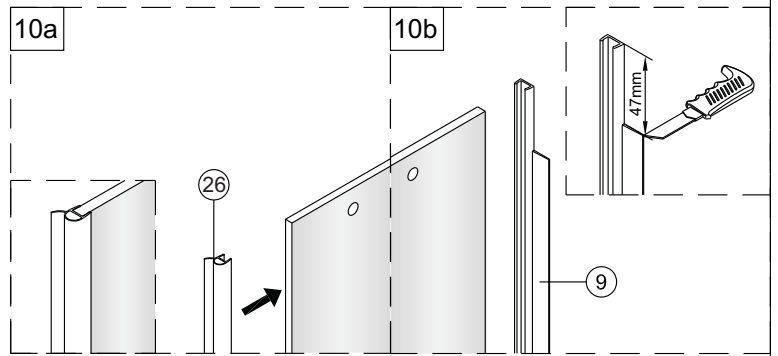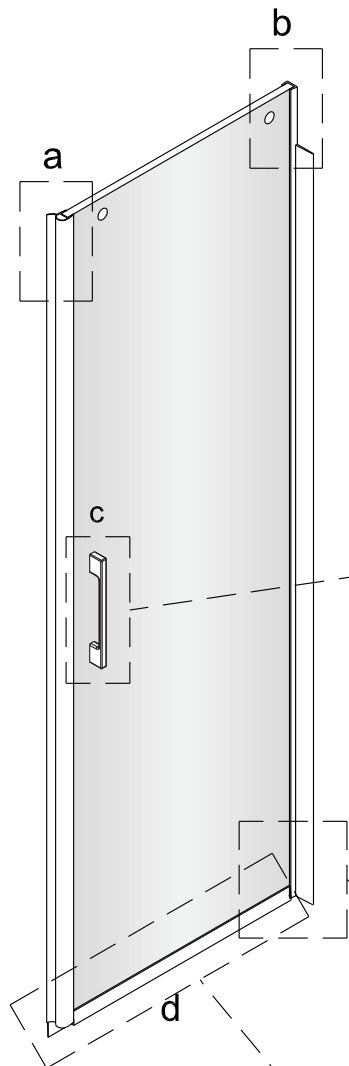



11

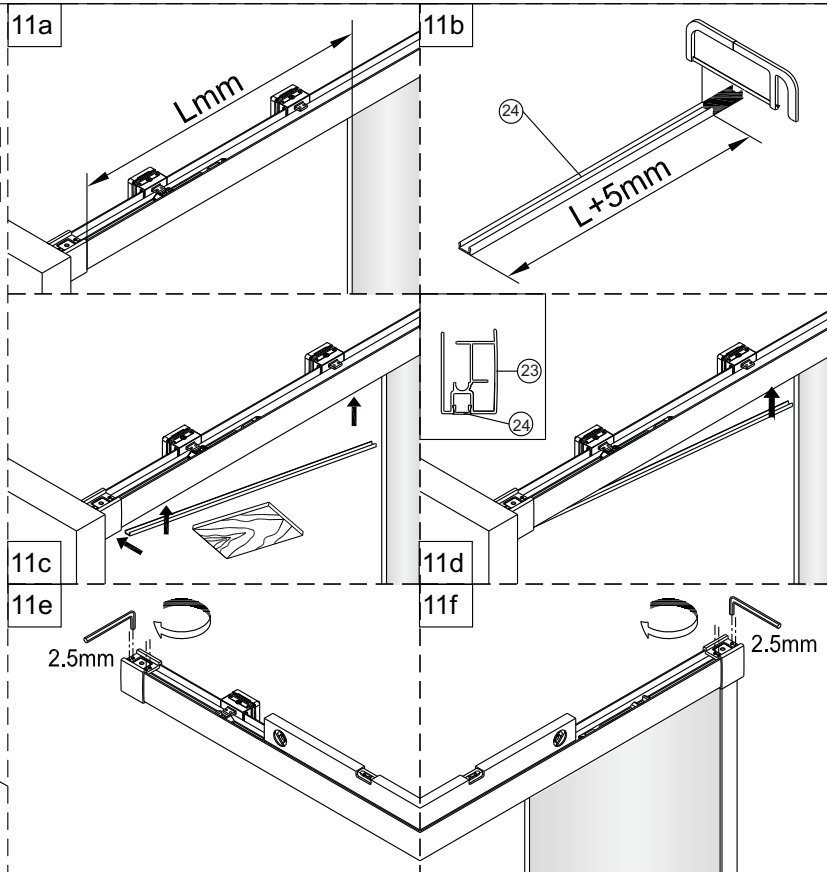



12

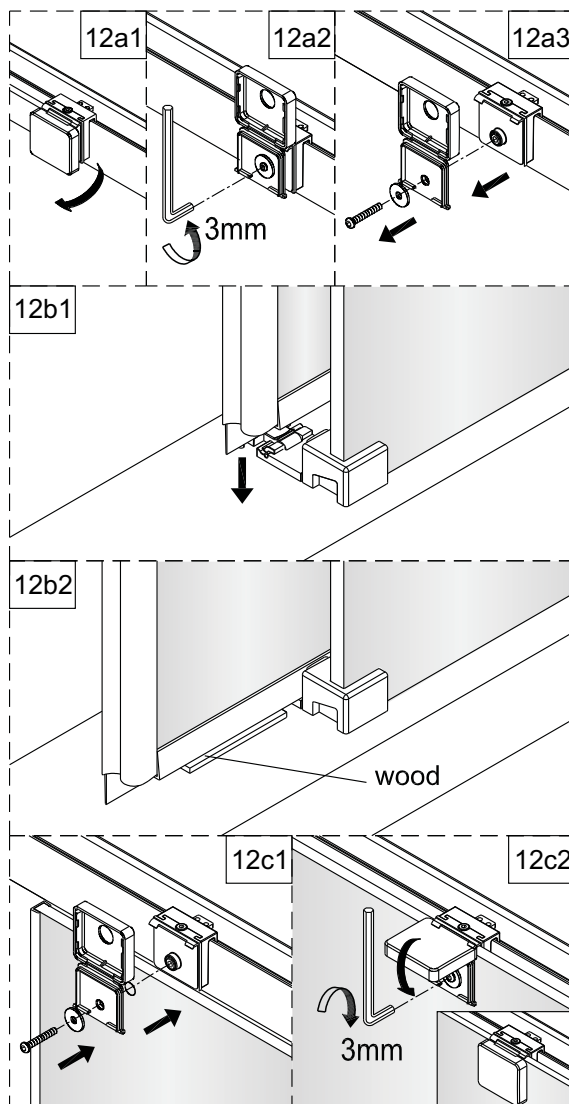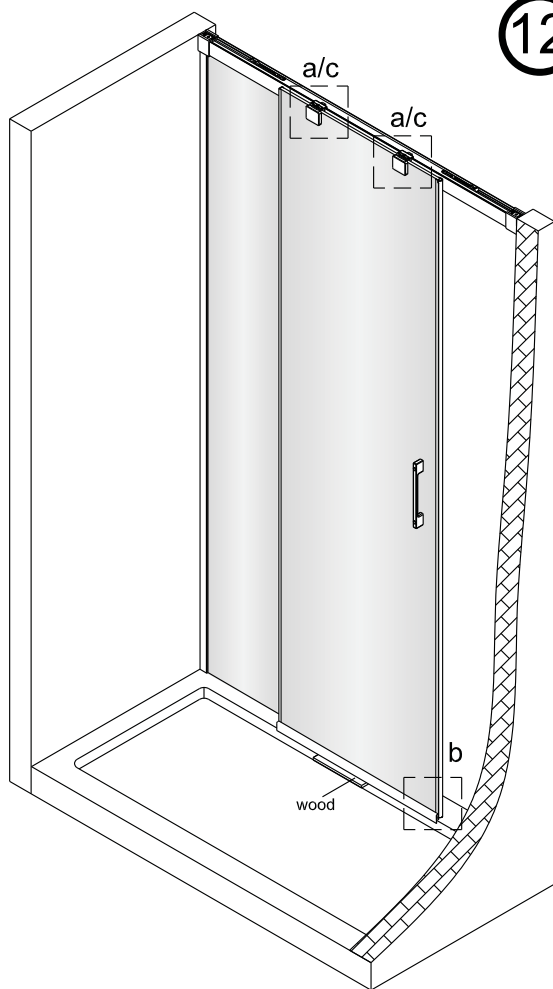


13

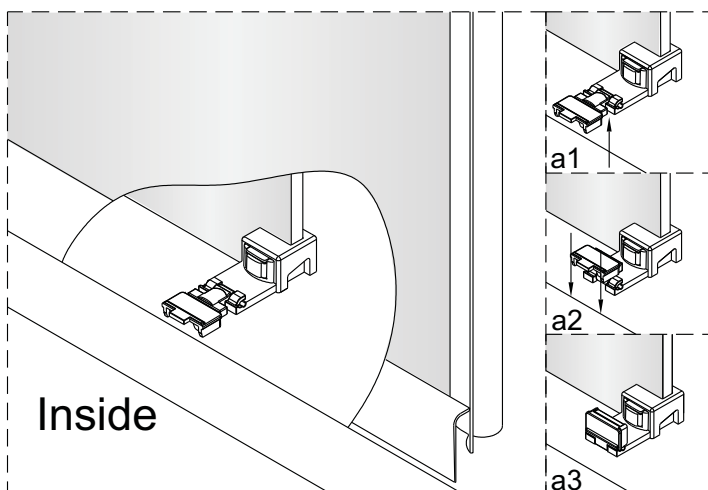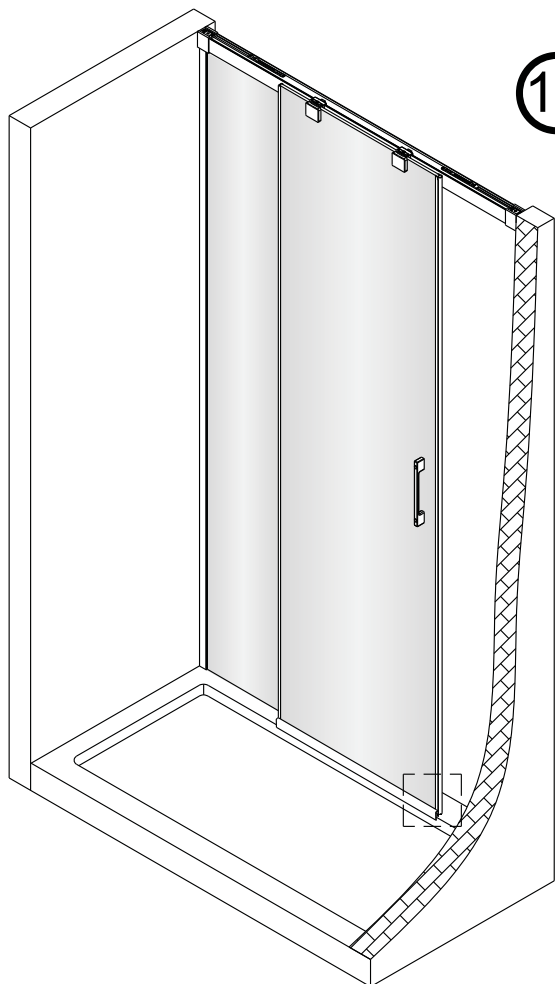


14

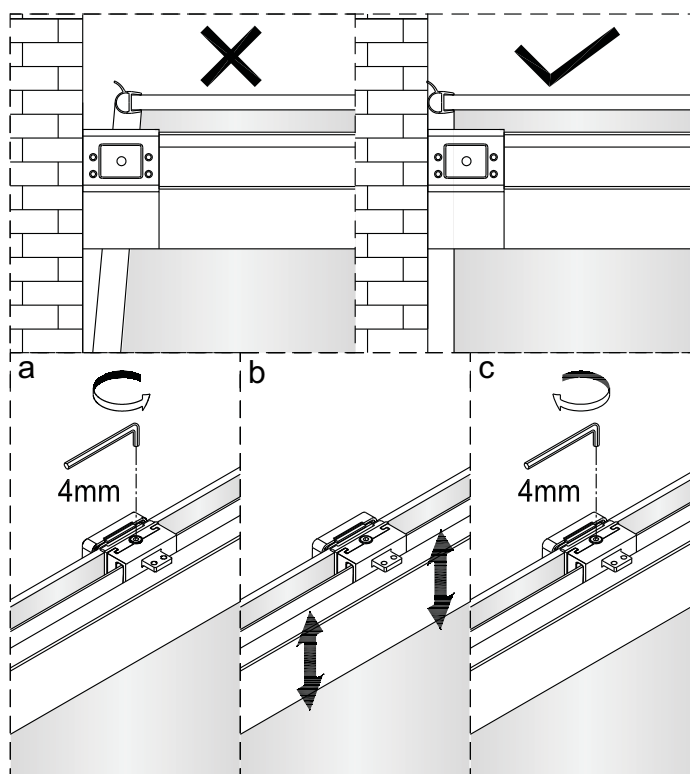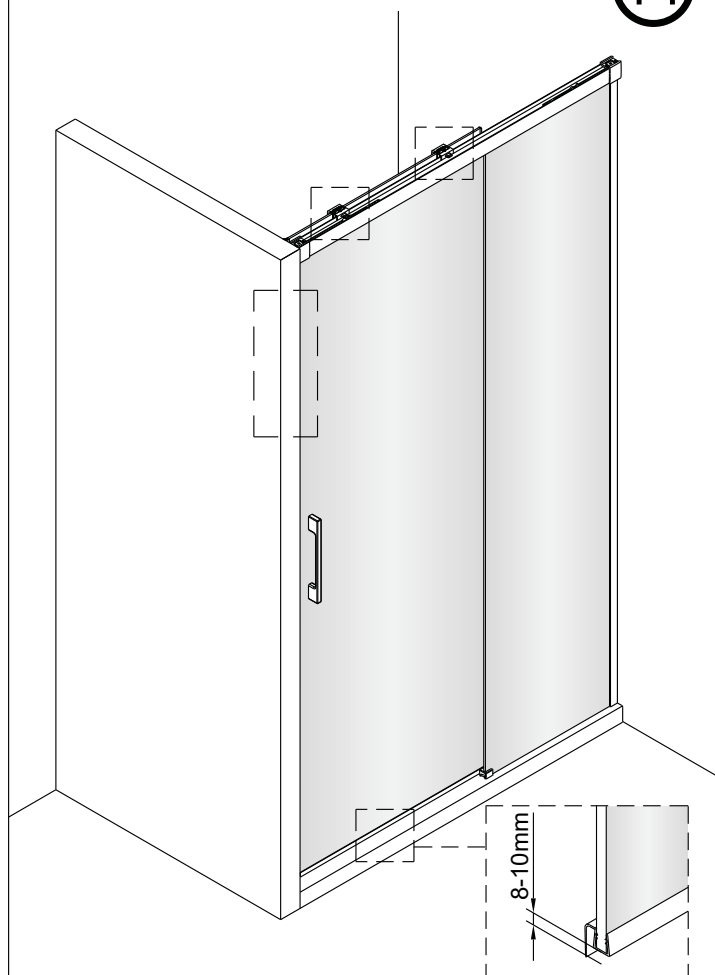


Adjust the moving door through the middle screw on moving door's roller: loosen the screw to make the moving door going up, tighten up the screw to make the moving door going down, meanwhile, please make sure there's 8-10mm gap between the bottom of moving door and the floor.

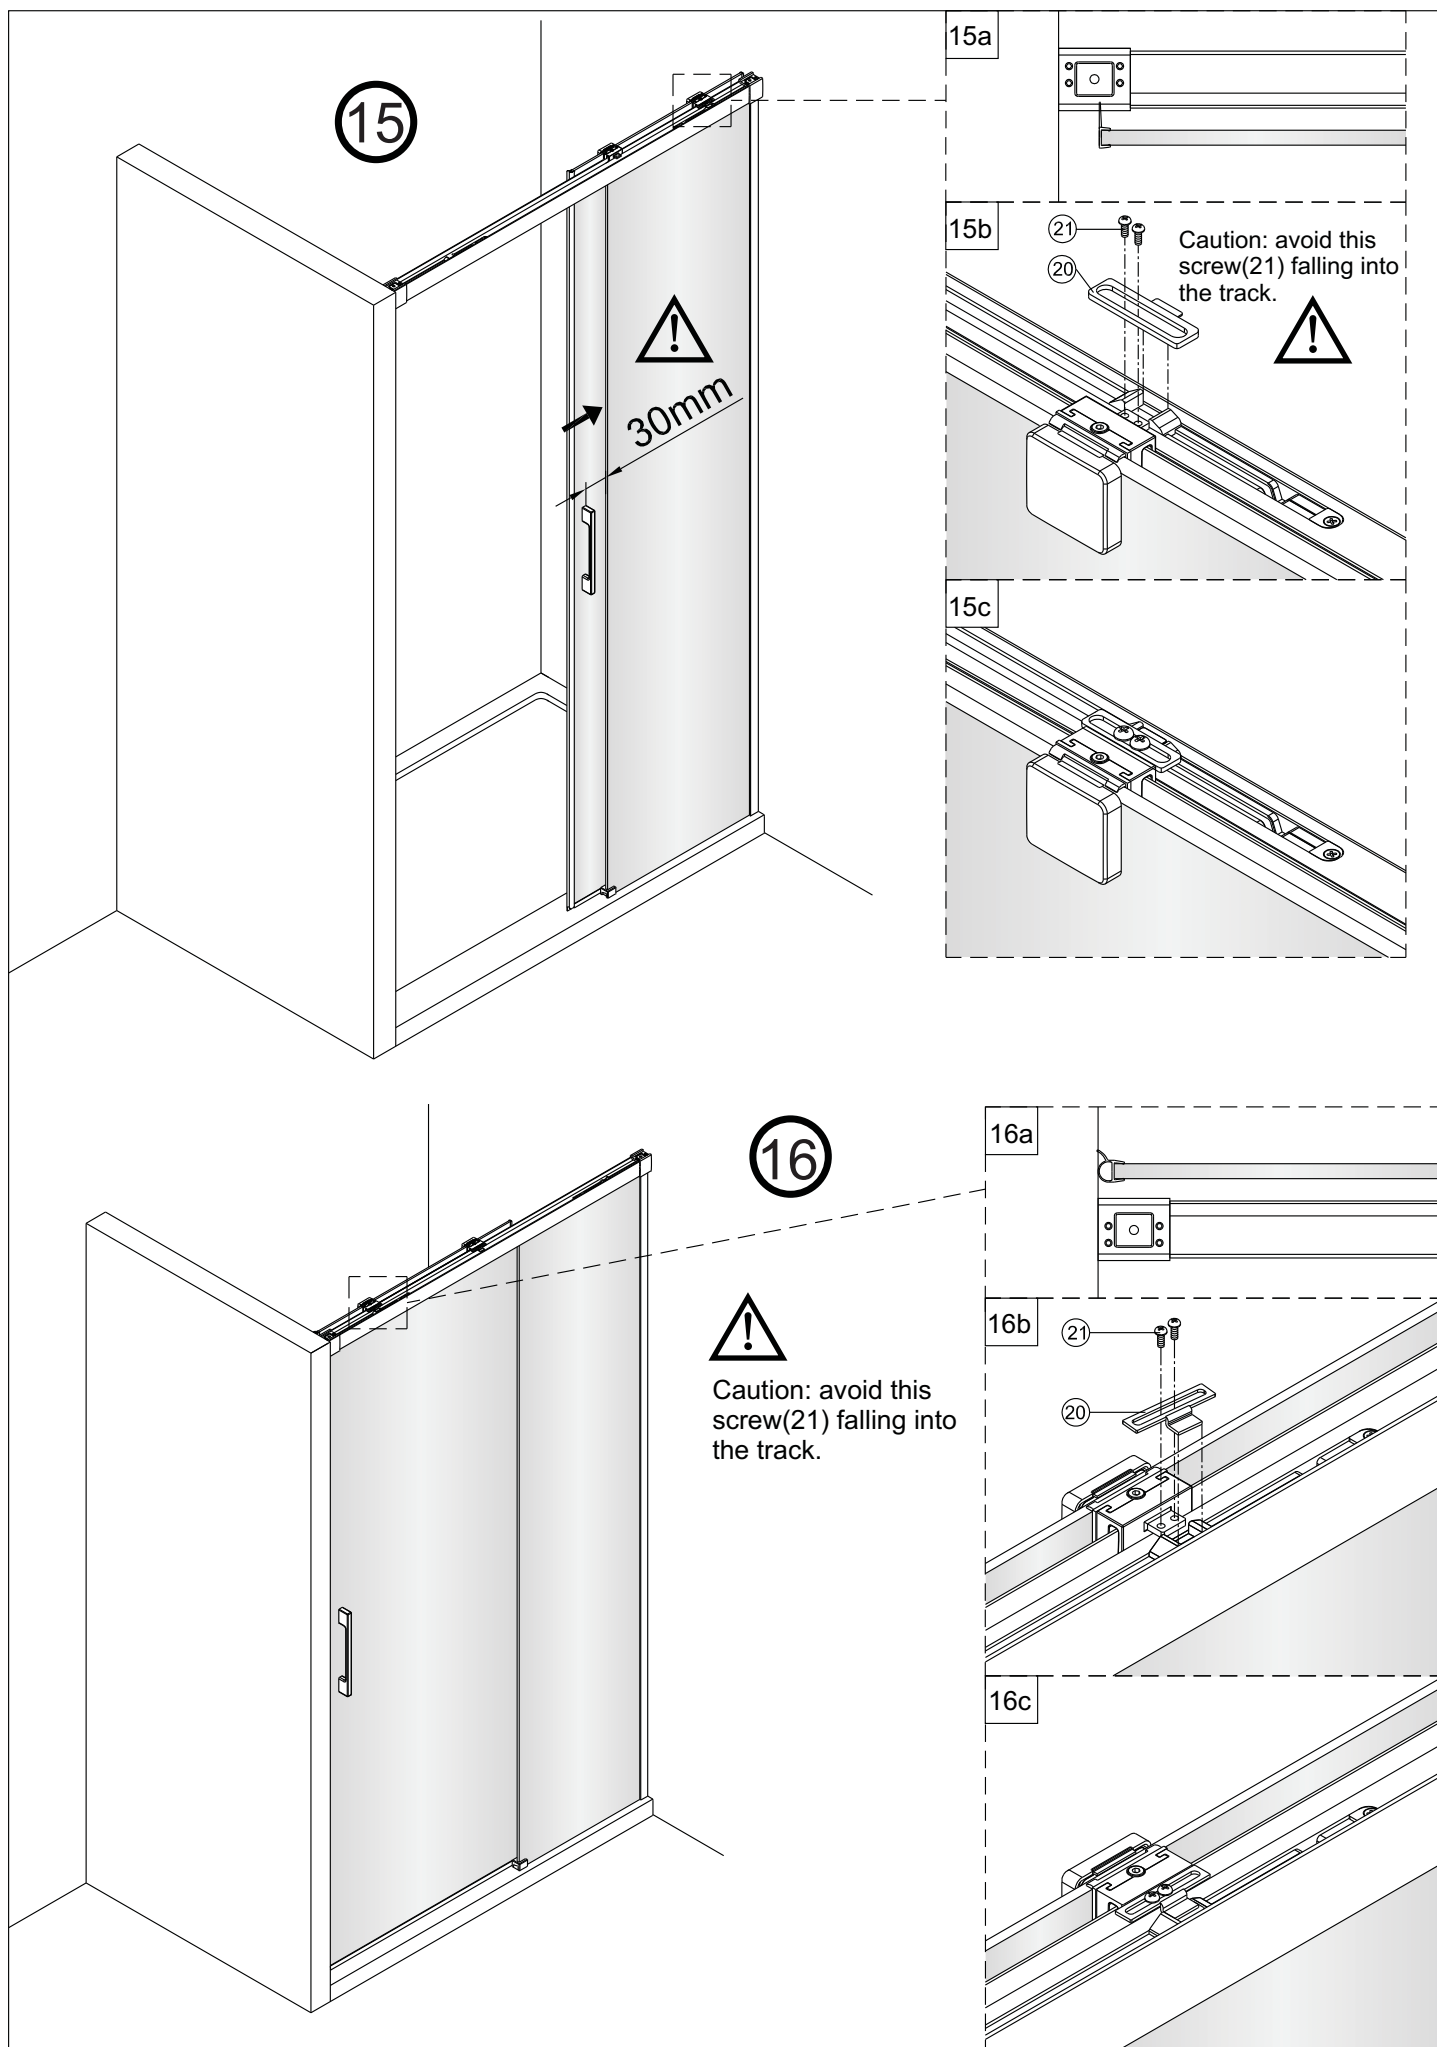


17a

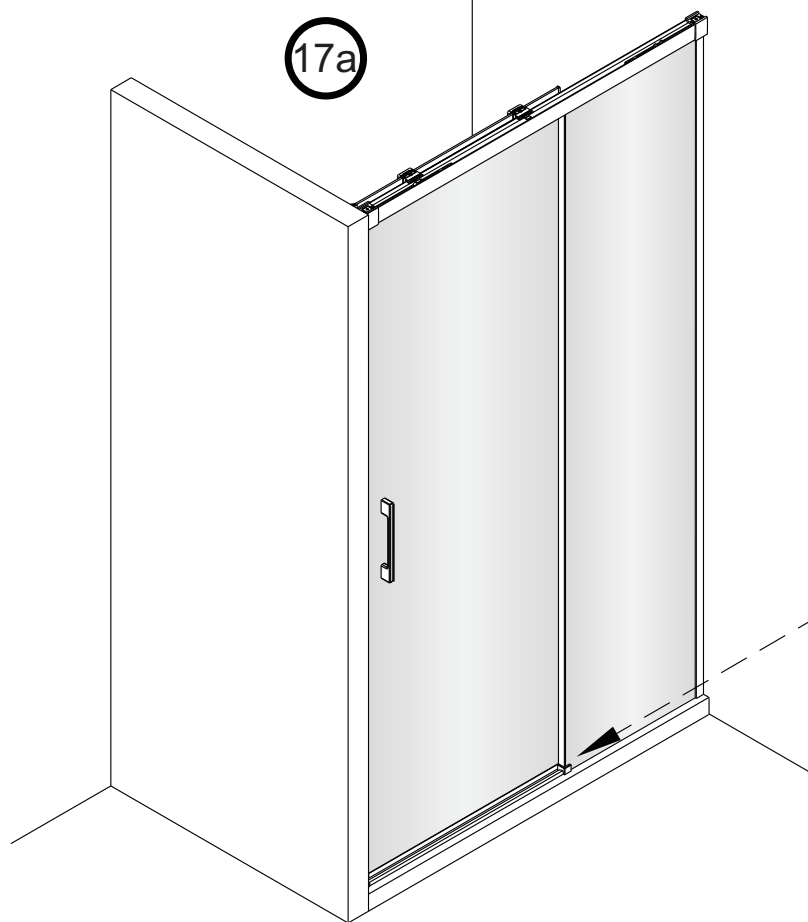


When bottom water barrier is needed for moving door, please see step 18a.

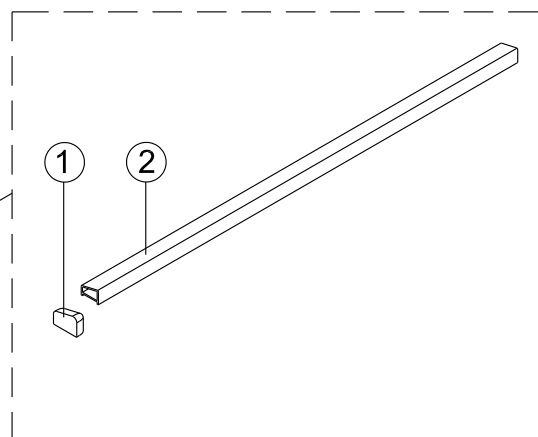



17b

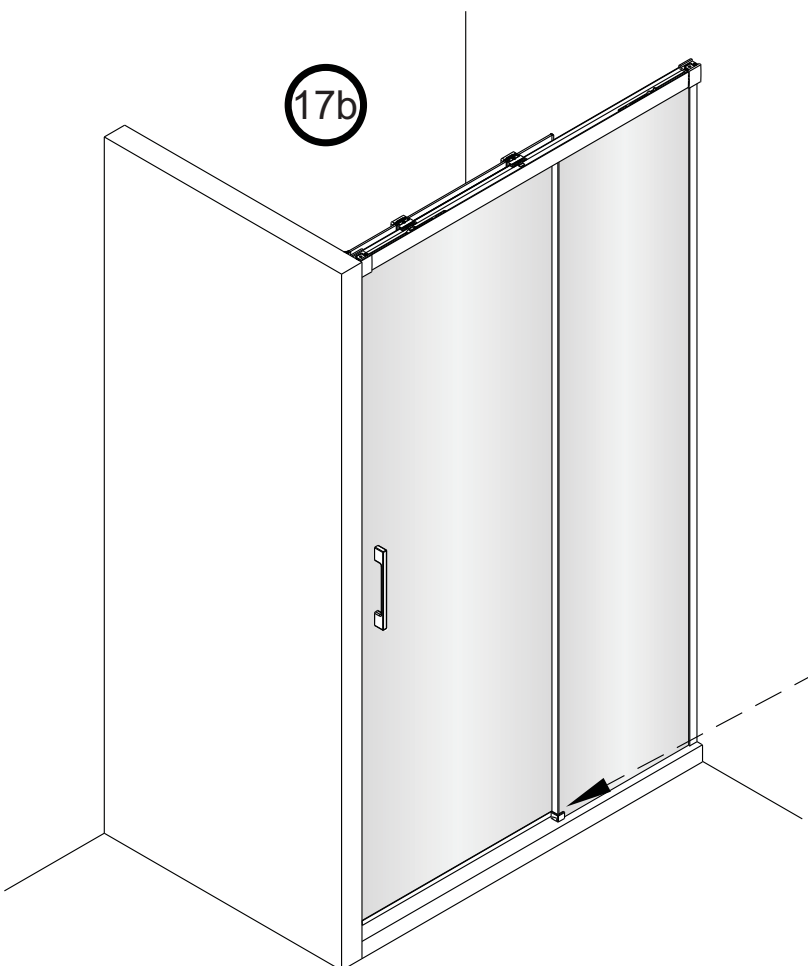

When bottom water barrier is not needed for moving door, please see step 18b.


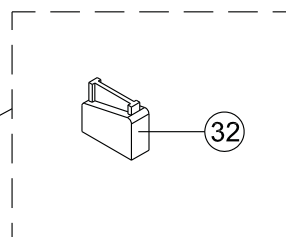



18a

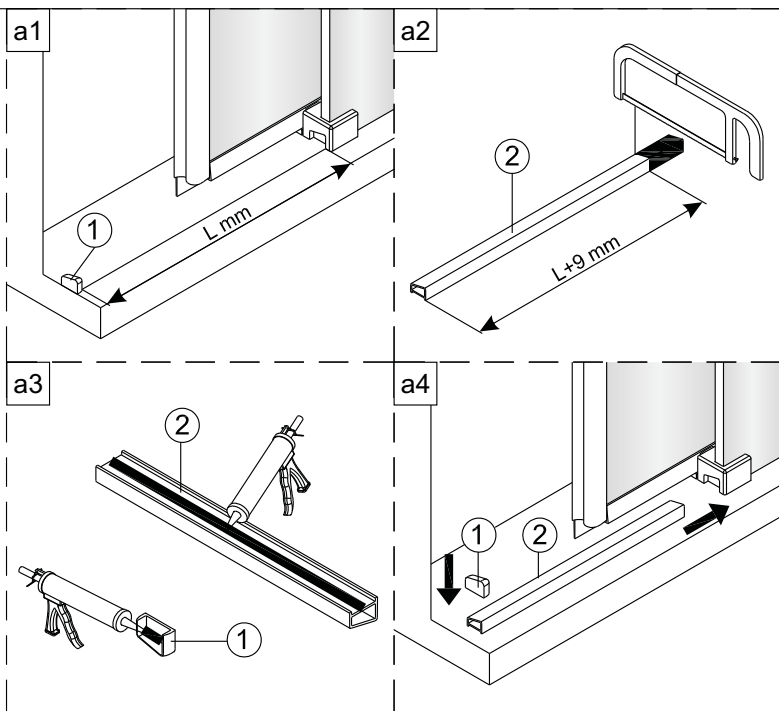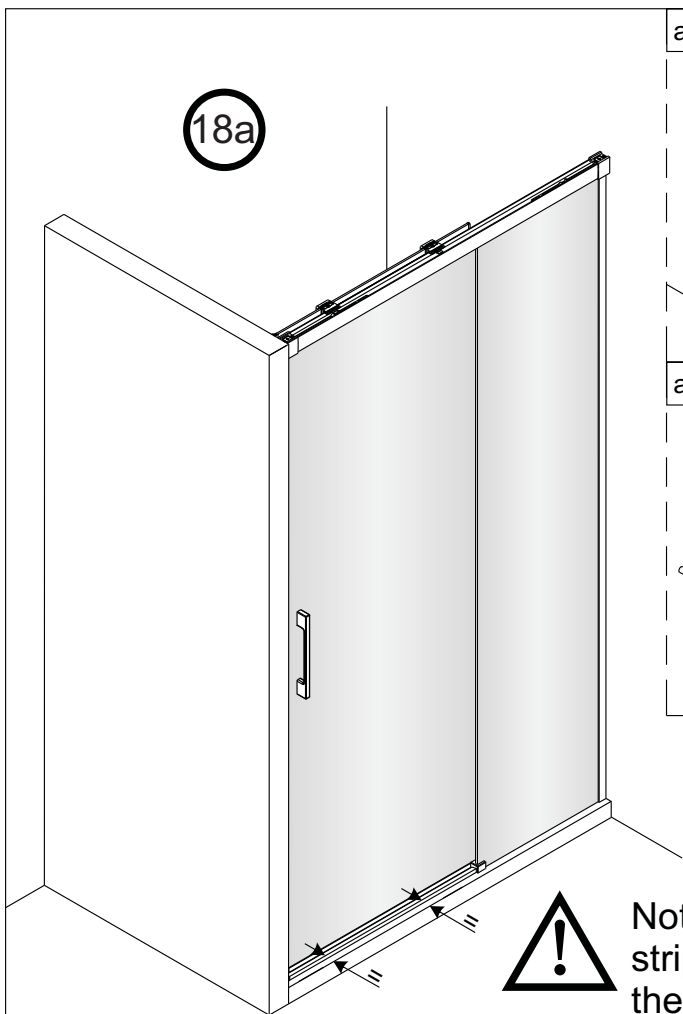


Note: the bottom waterproof strip here must parallel to the rim of shower tray.

18b

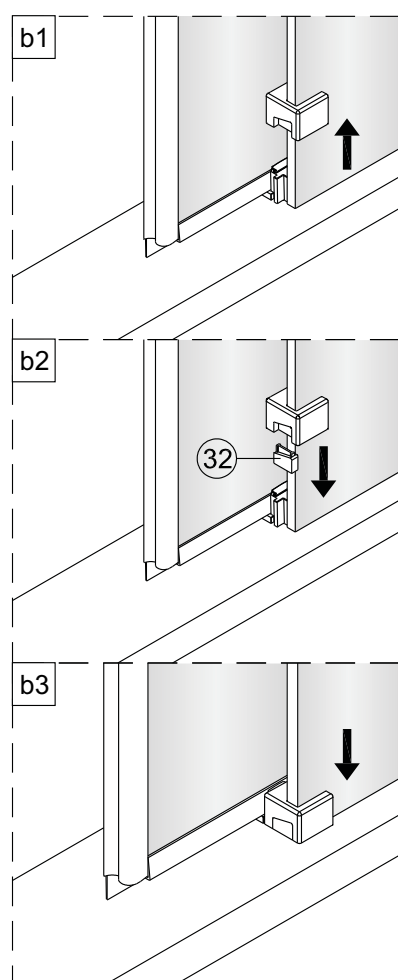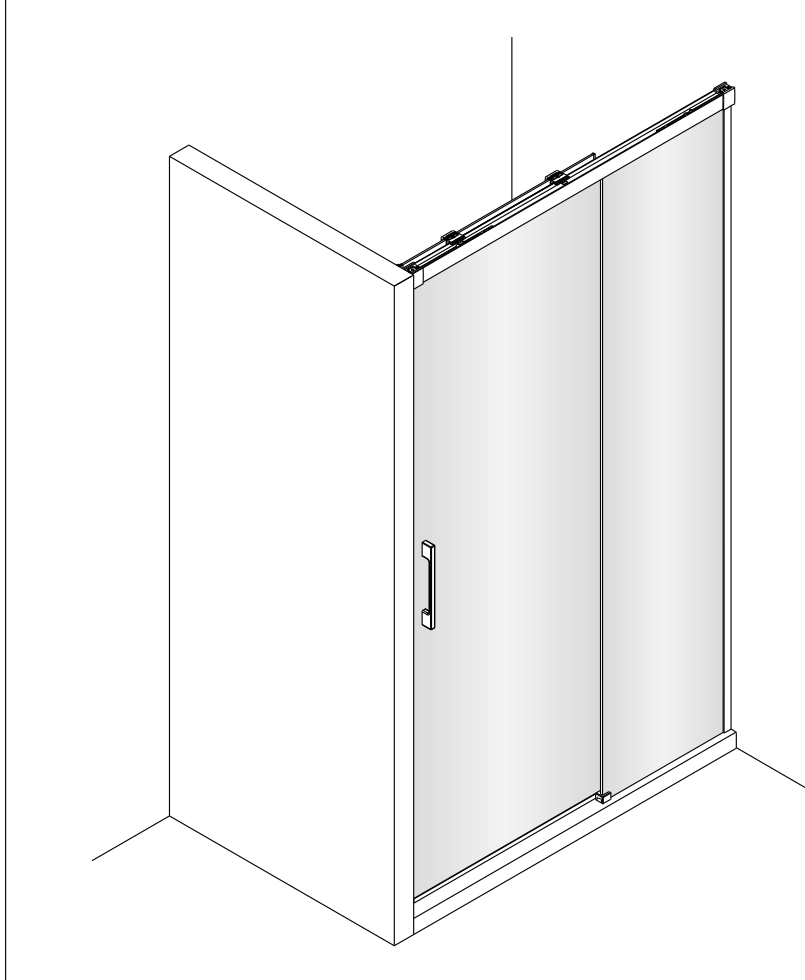

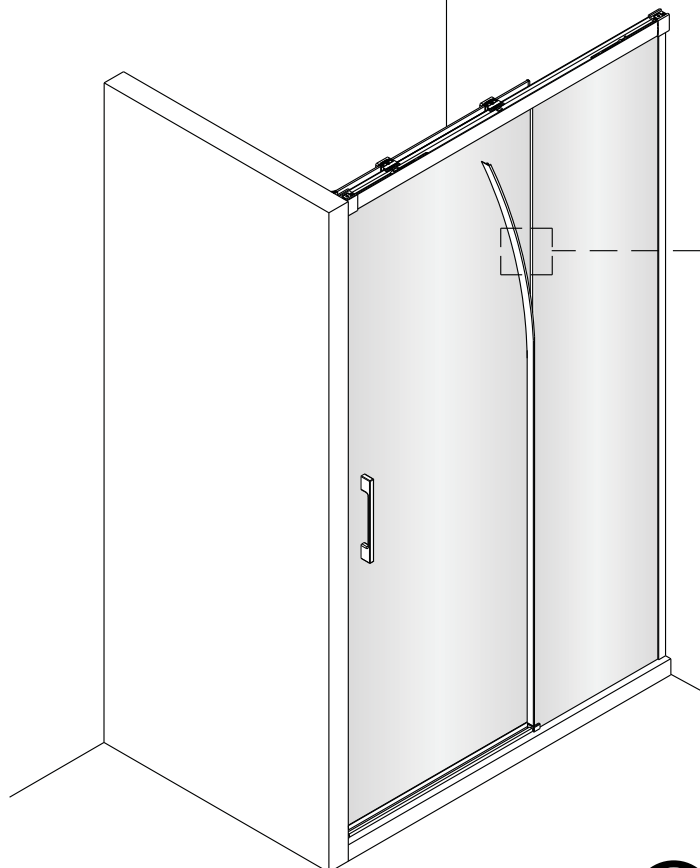

19

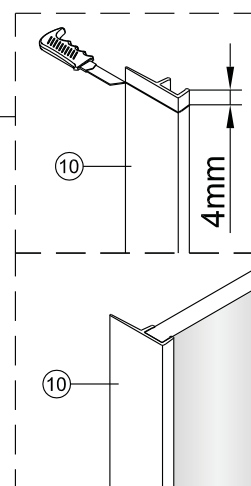

20

