

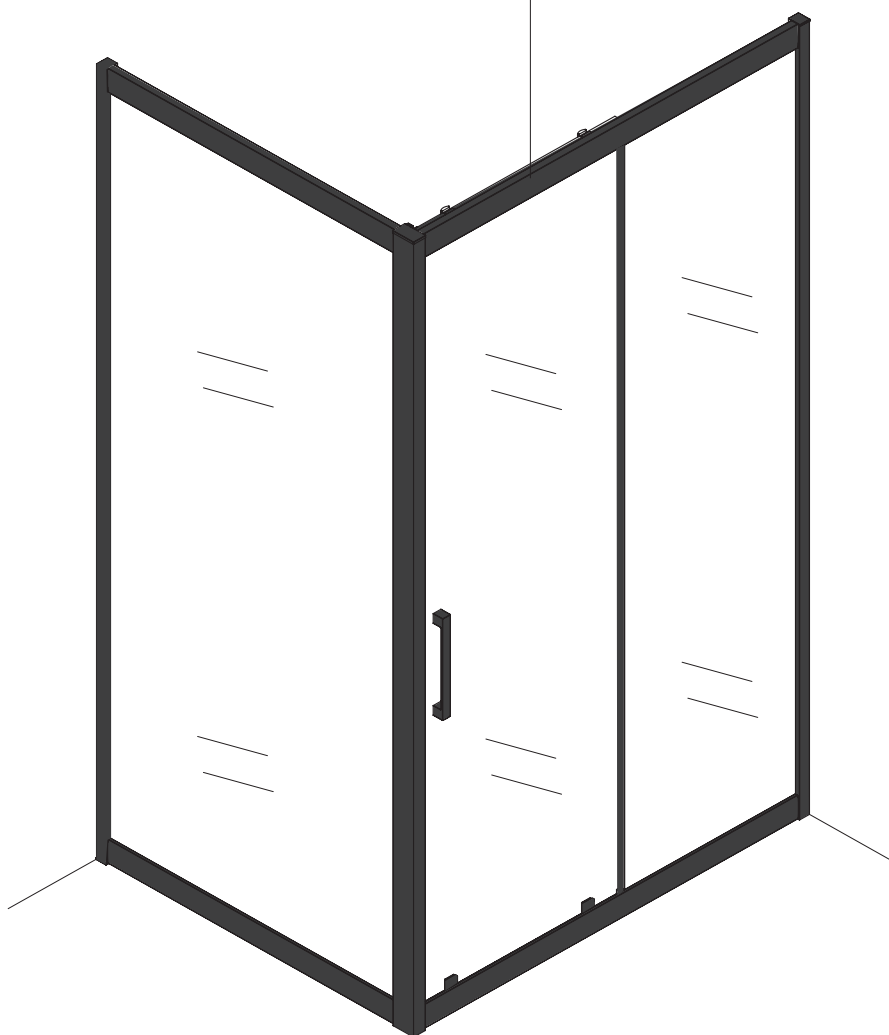
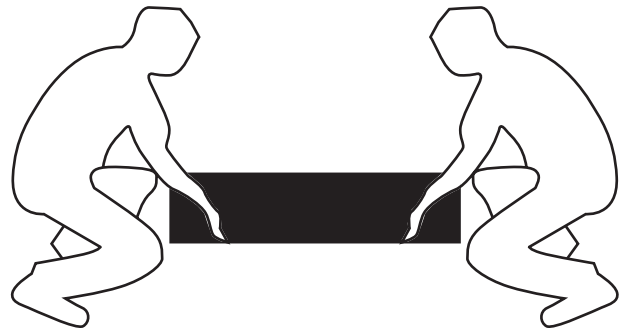
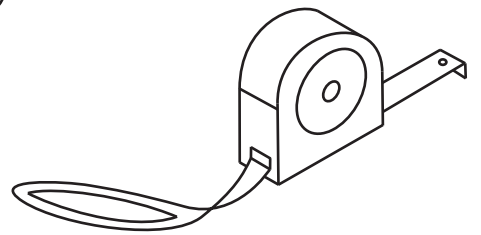
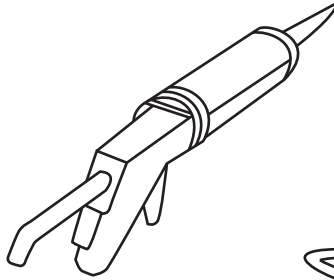
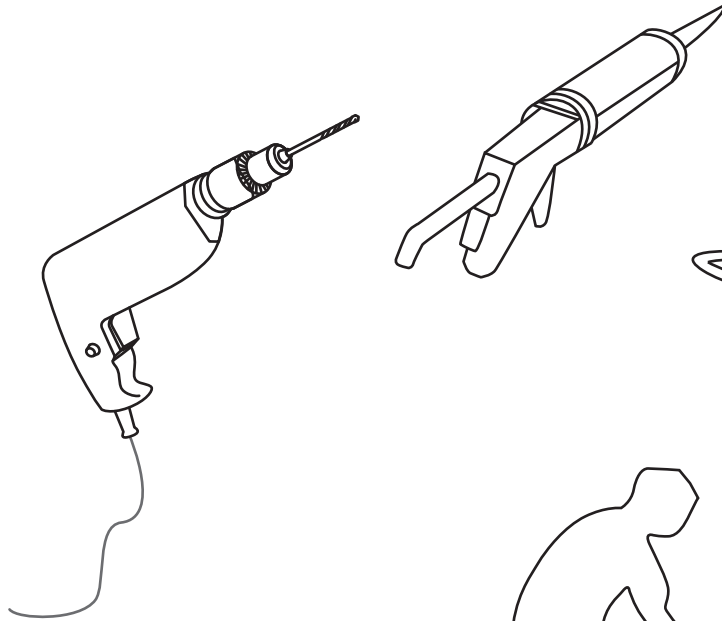
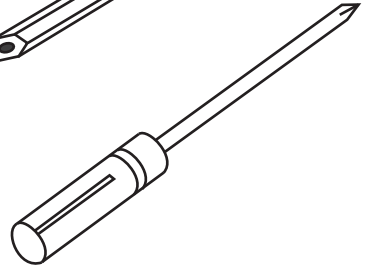


INSTALLATIE VOORSCHRIFT


Skyline side panel


900(880-890)x2000

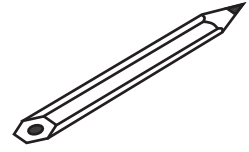

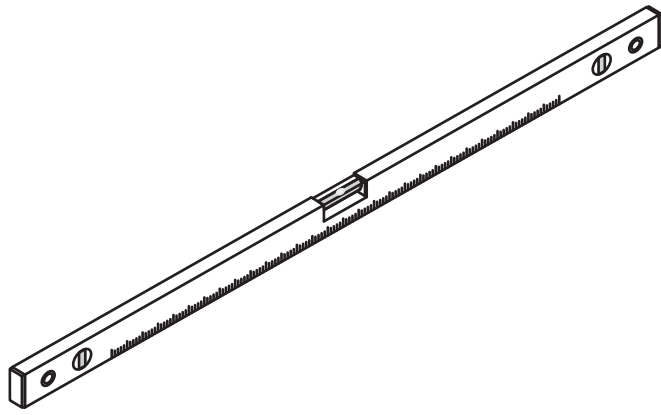


1






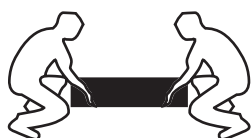









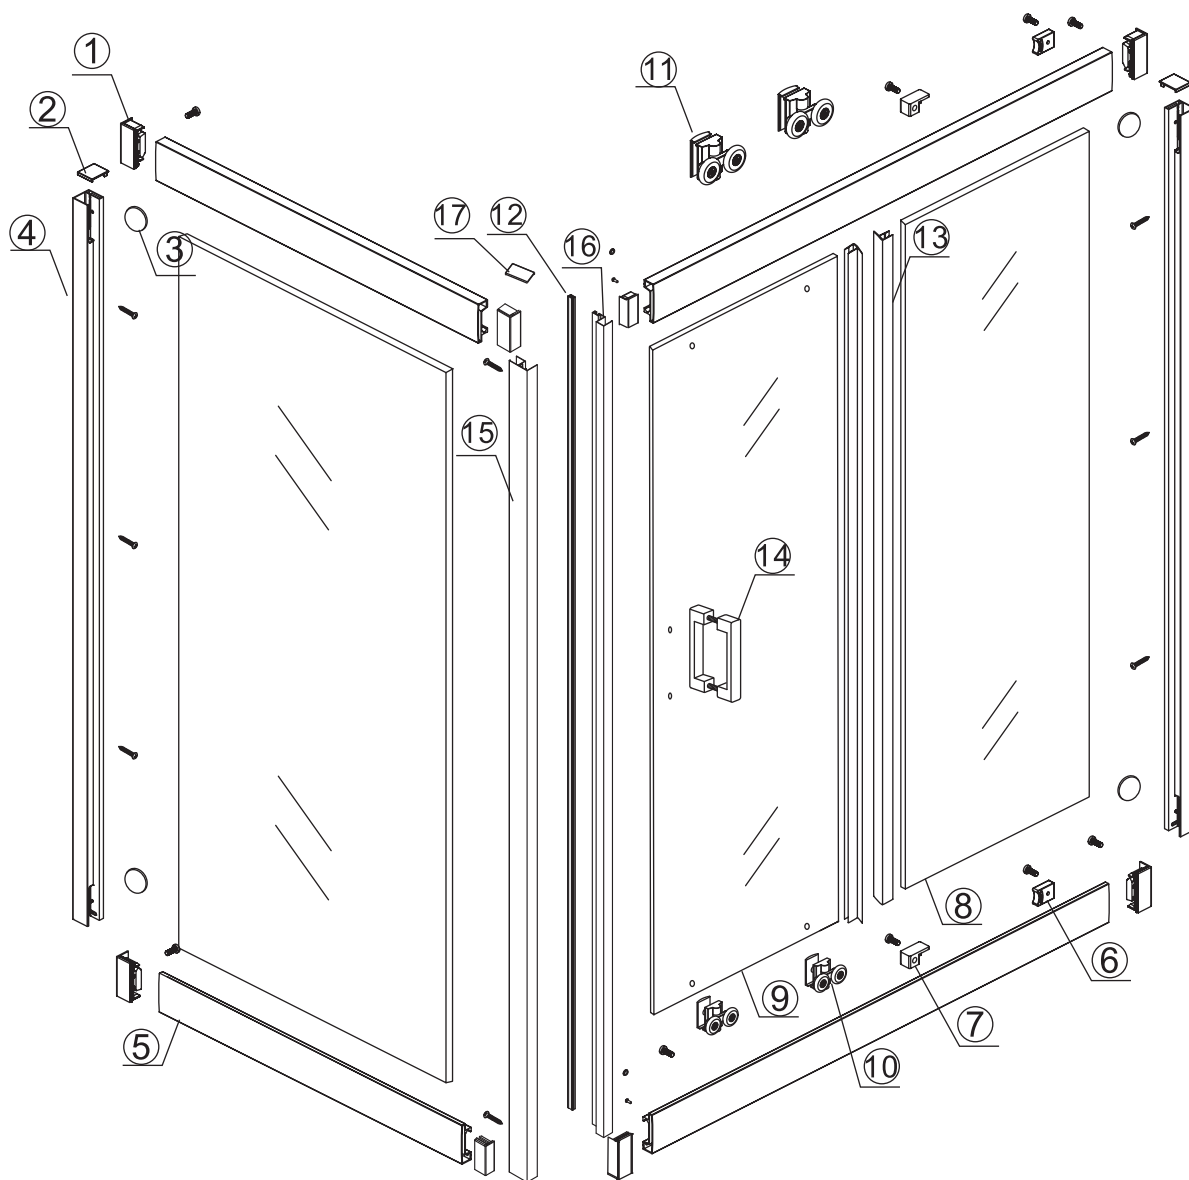


- | | | | | | | |
|------|------|------|------|------|------|------|
| ① X8 | ② X2 | ③ X7 | ④ X2 | ⑤ X4 | ⑥ X2 | ⑦ X2 |
| ⑧ X2 | ⑨ X1 | ⑩ X2 | ⑪ X2 | ⑫ X1 | ⑬ X2 | ⑭ X1 |
| ⑮ | ⑯ | ⑰ | X1 | X18 | X6 | X3 |






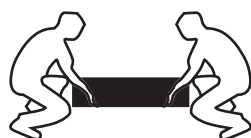


3

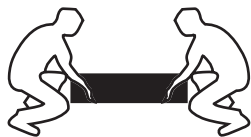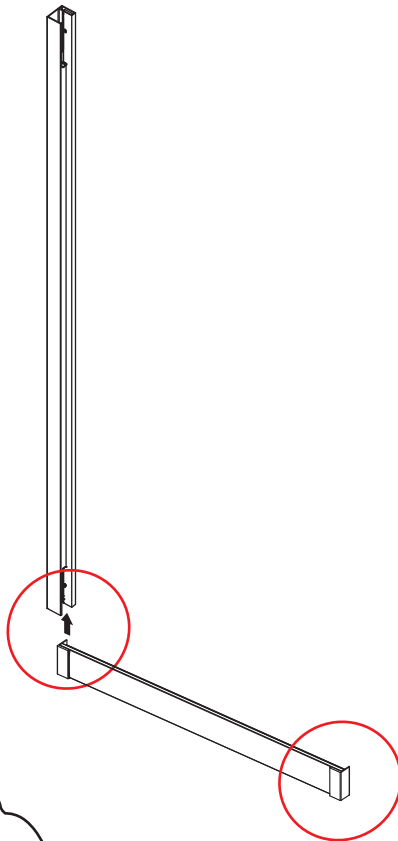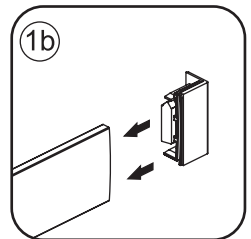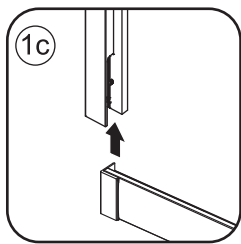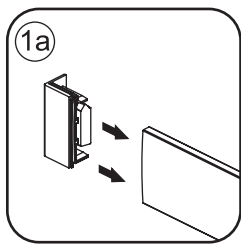
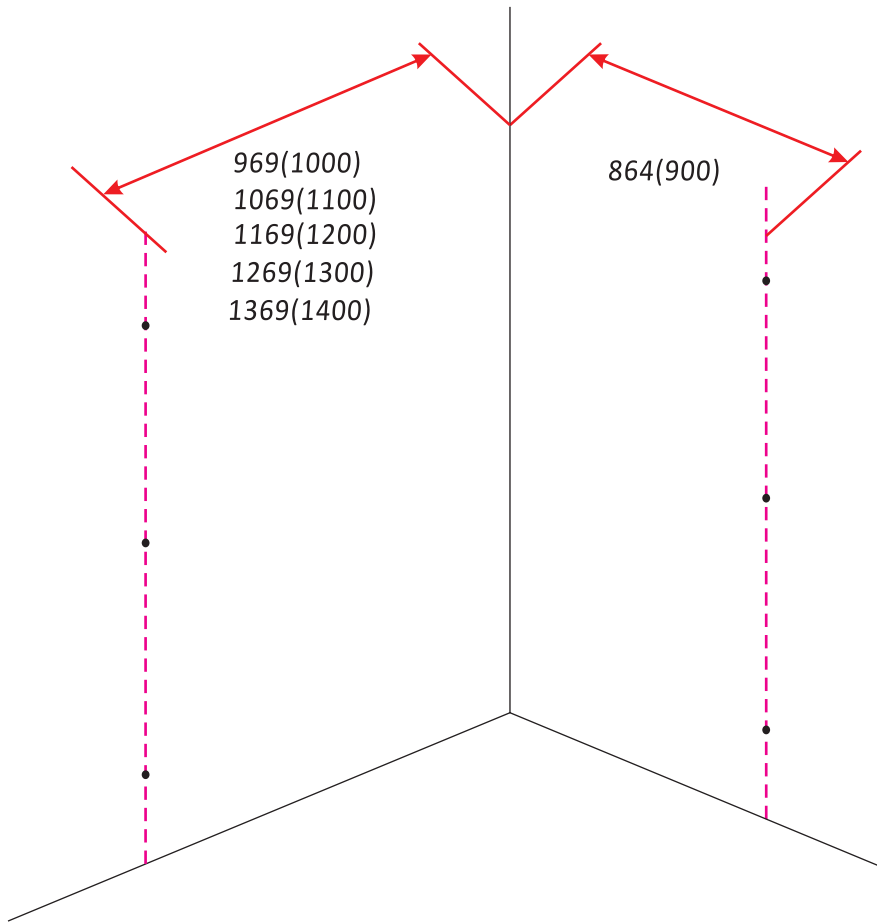


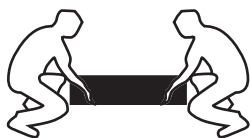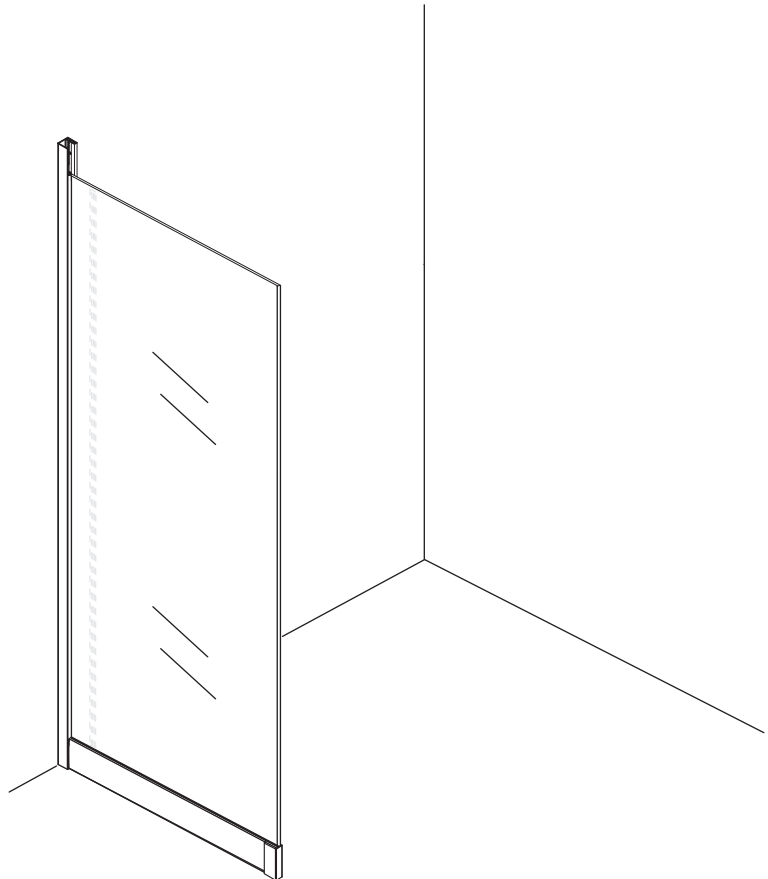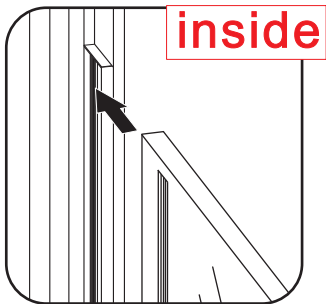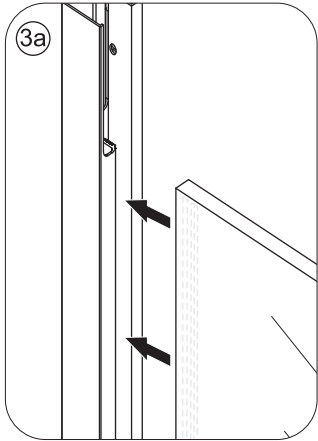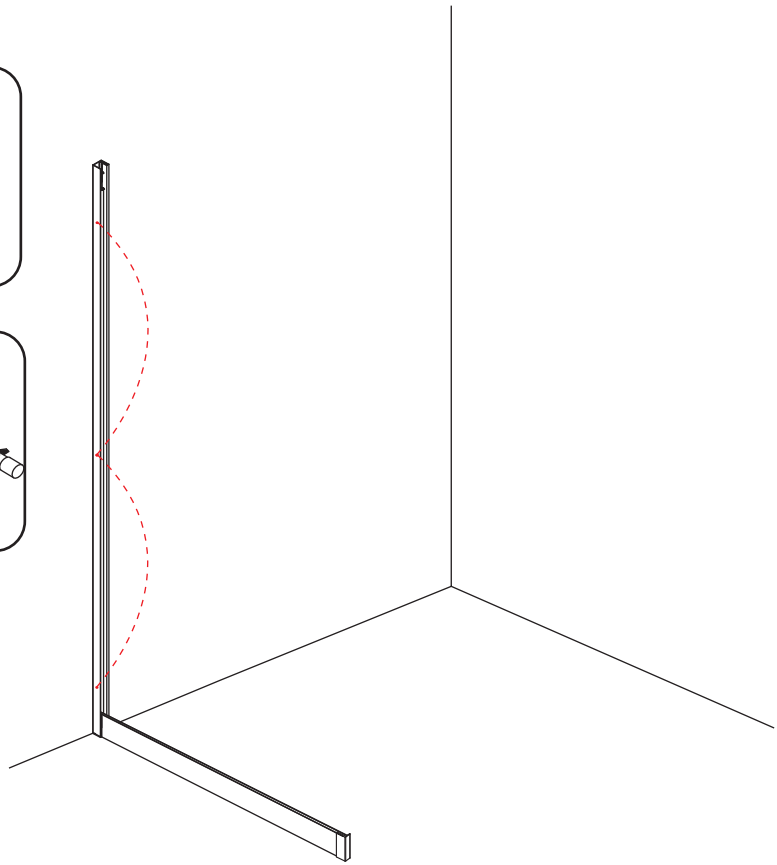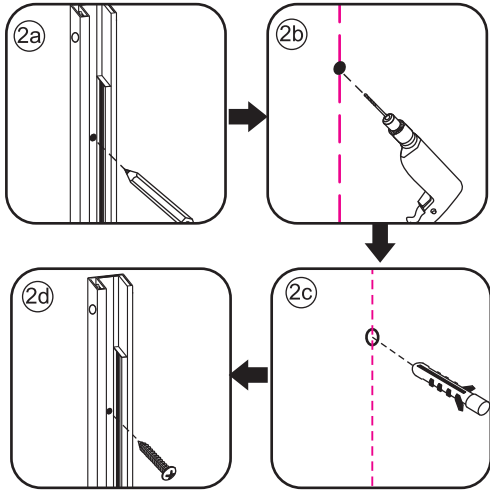


5

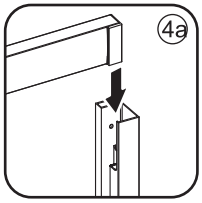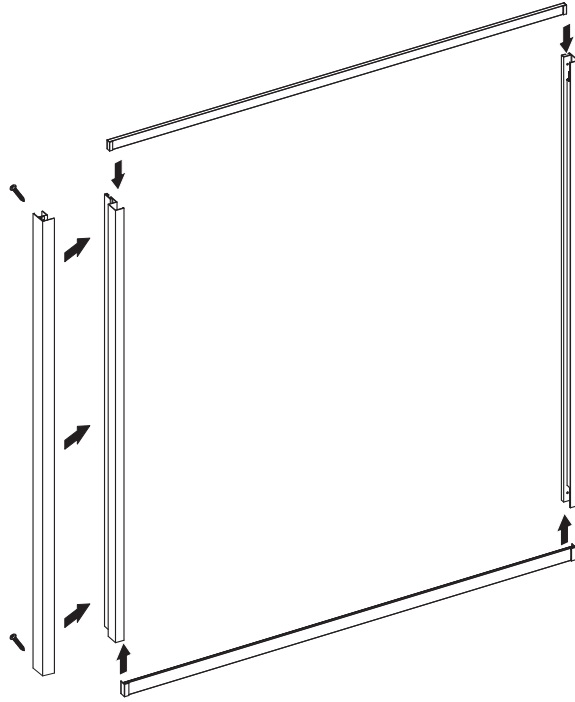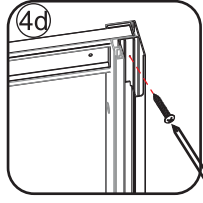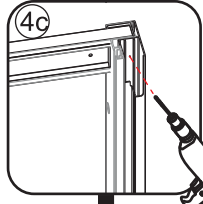
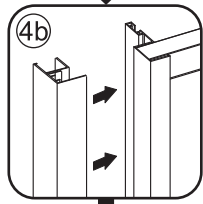
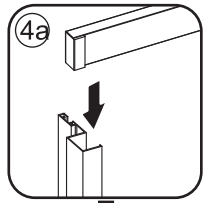


X2
M4x16

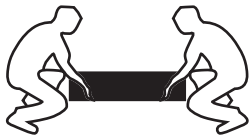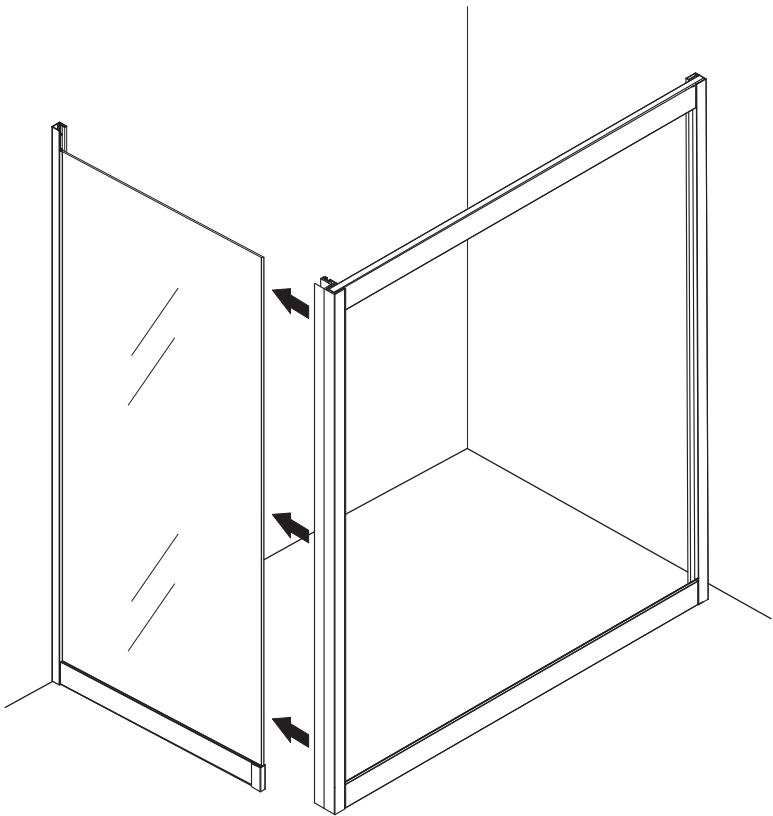



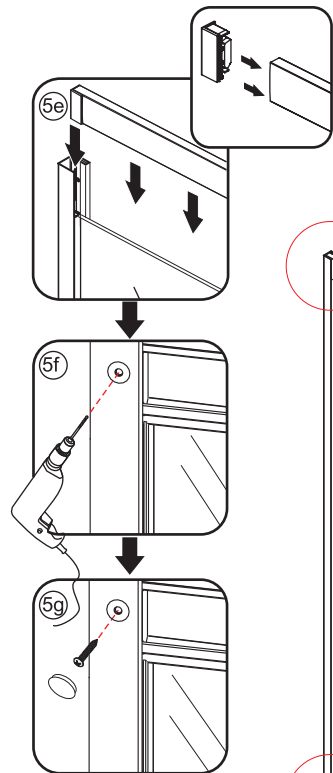


X2
M4x16











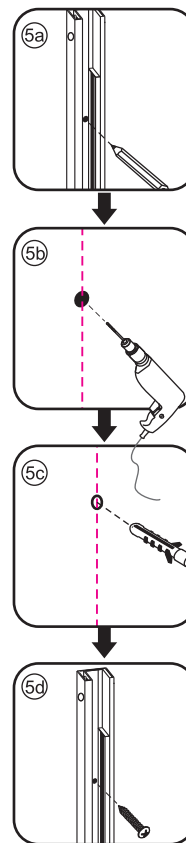
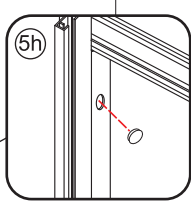
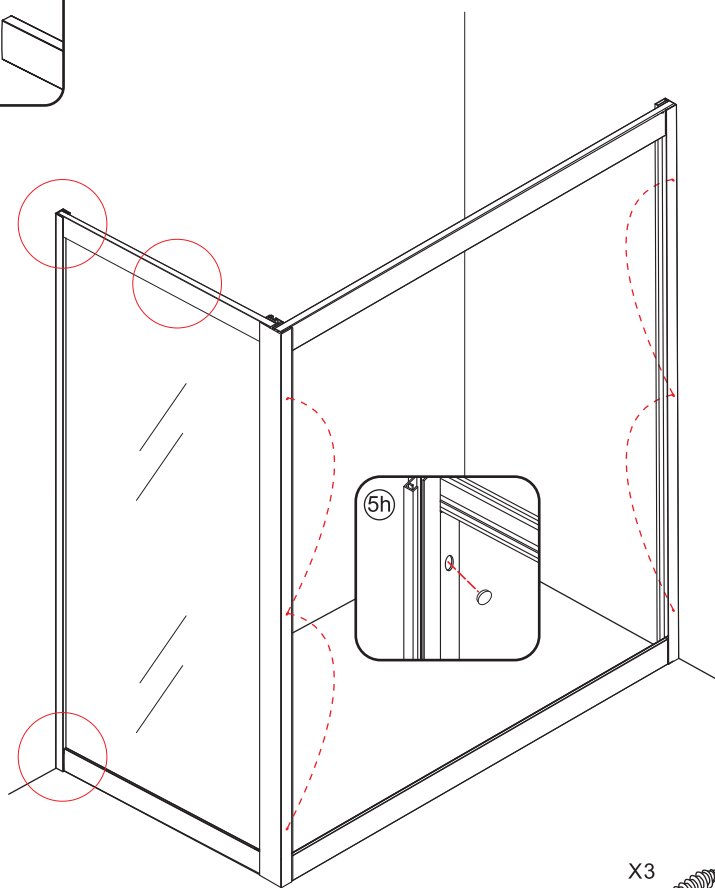






X3
M4x30


X3
M4x30

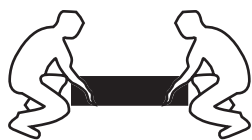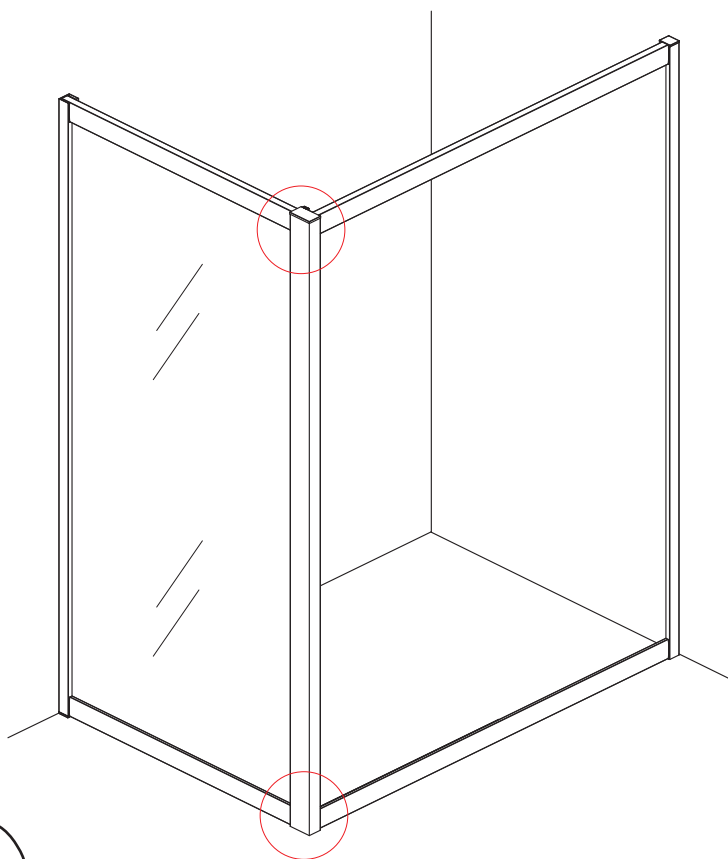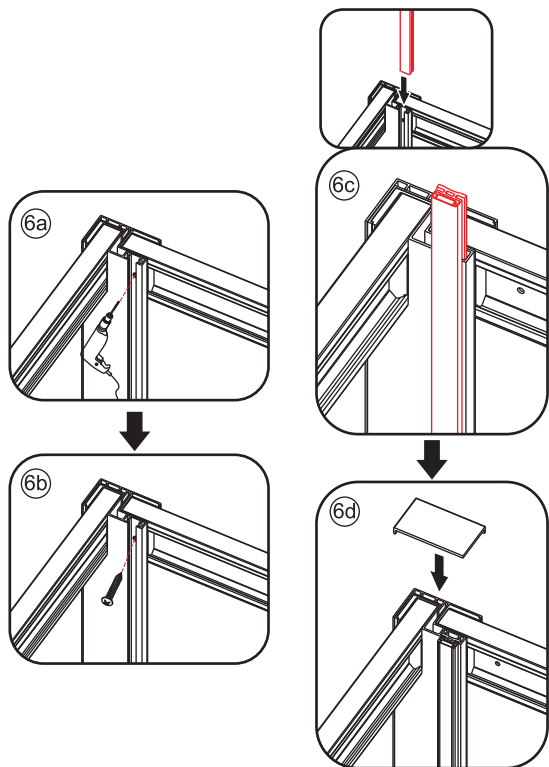






7

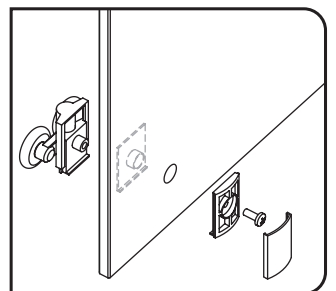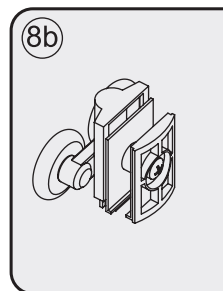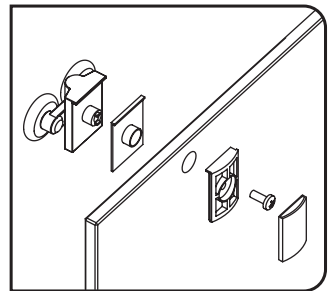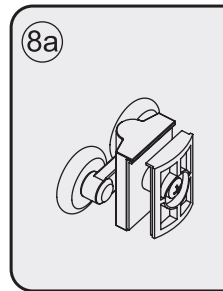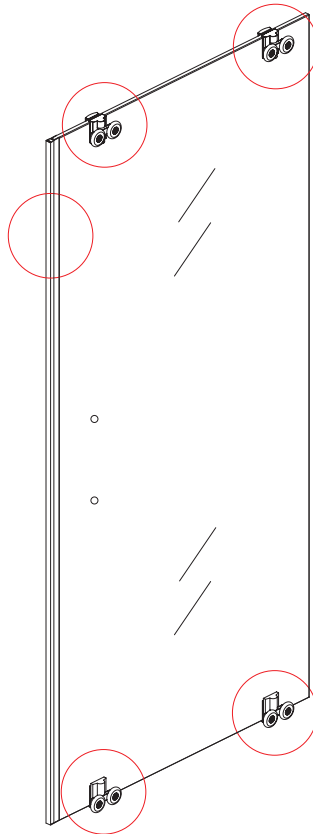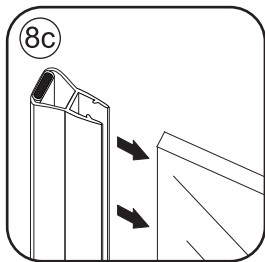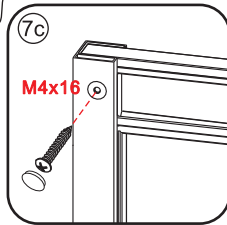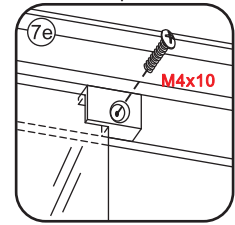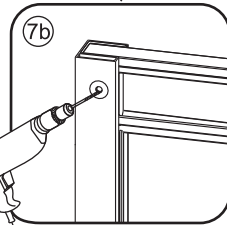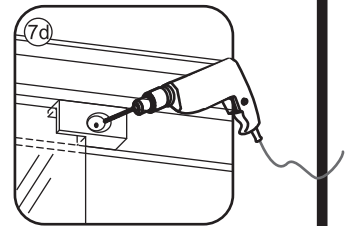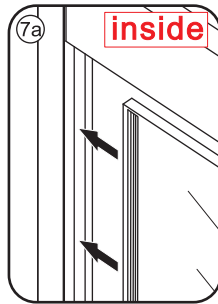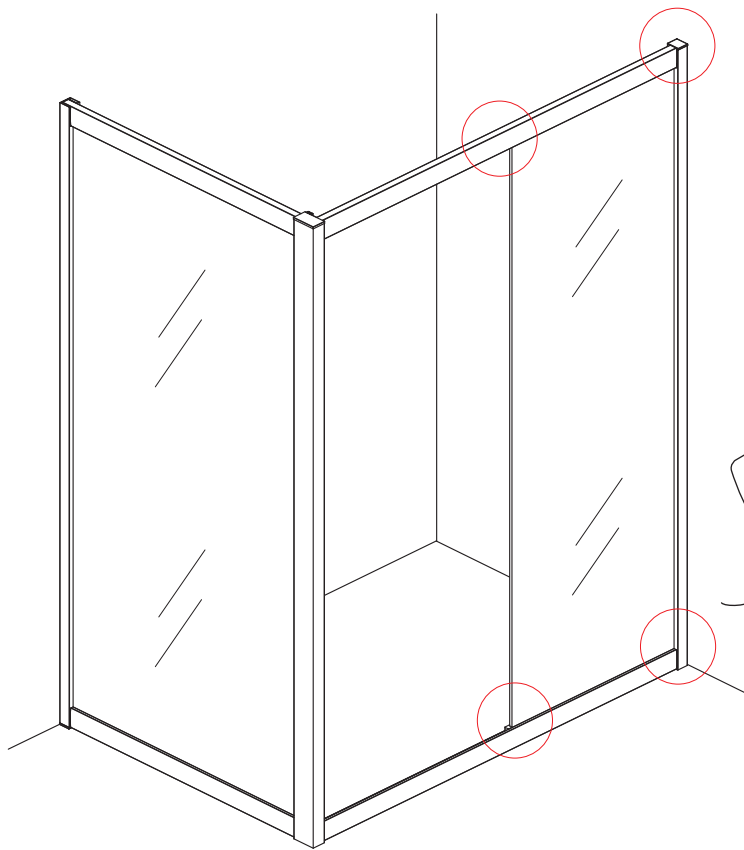

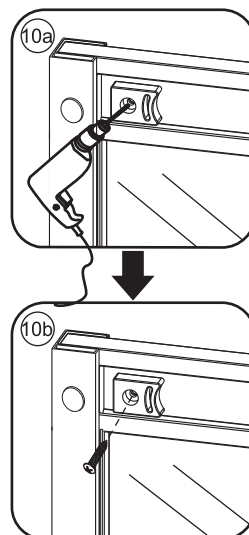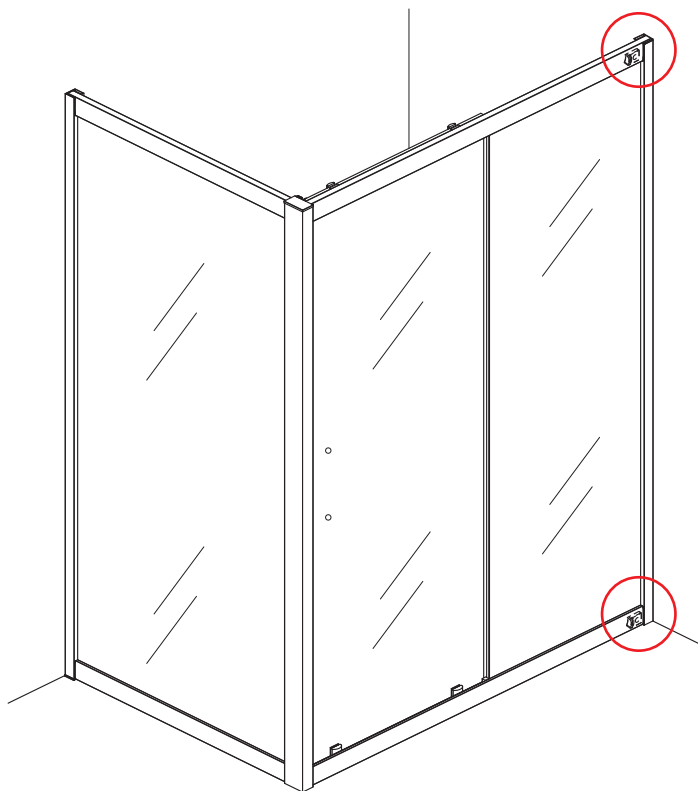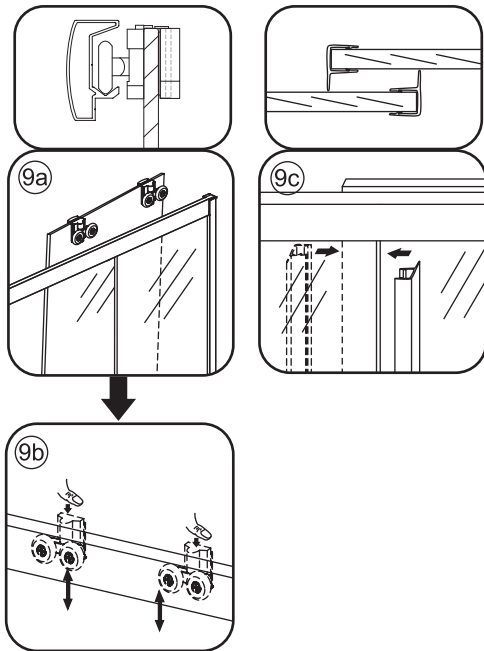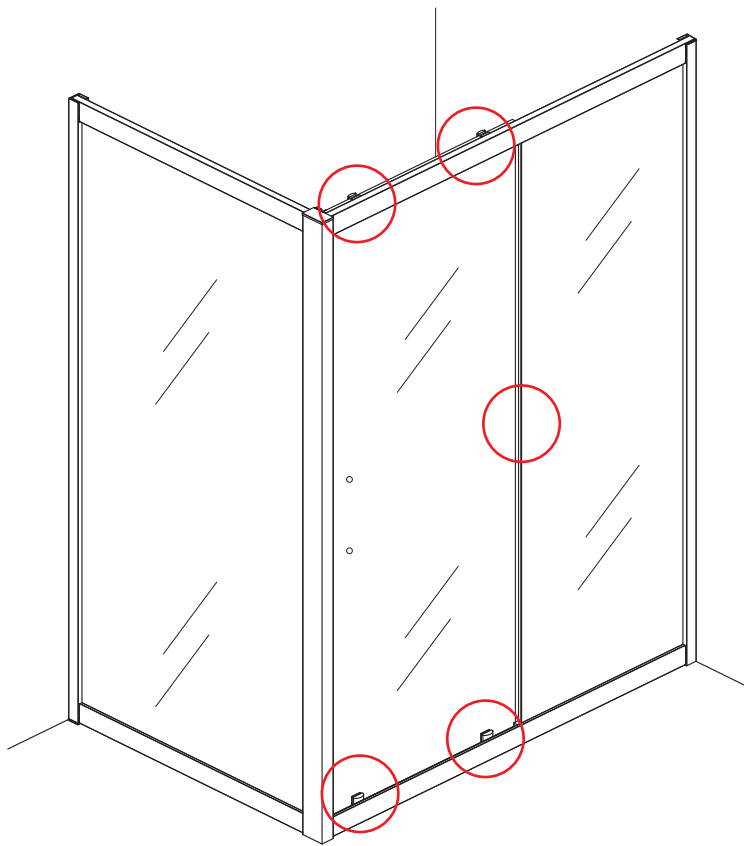

X2
 M4x8

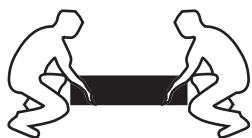

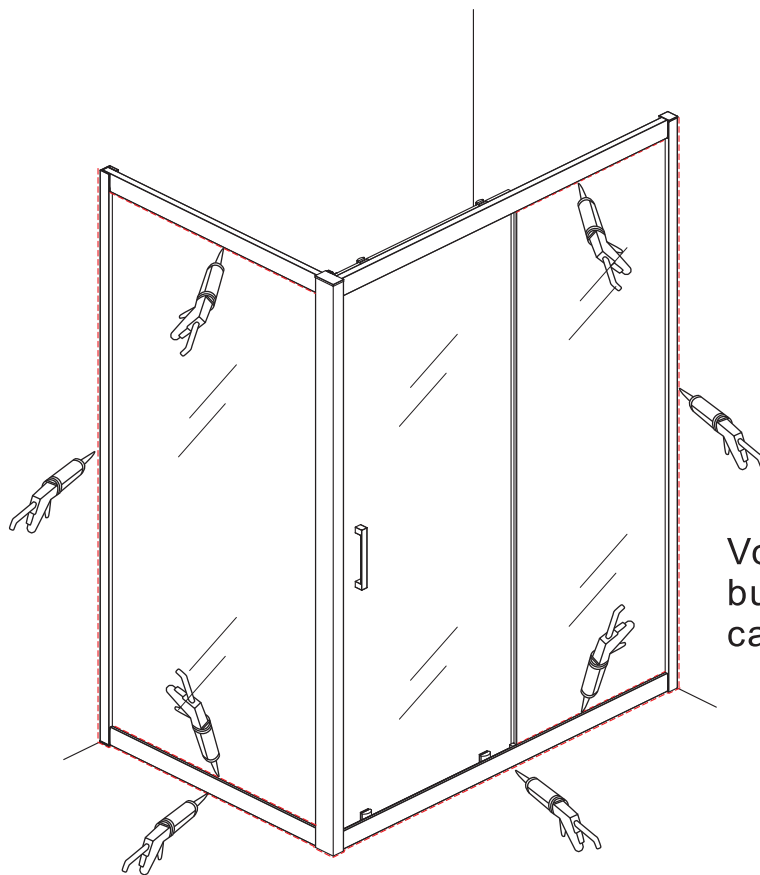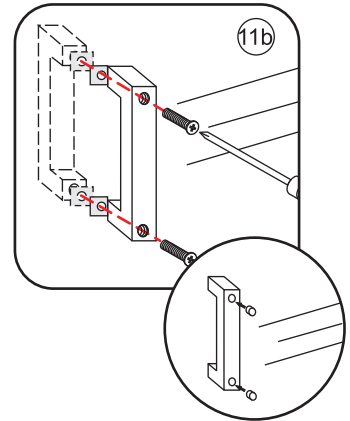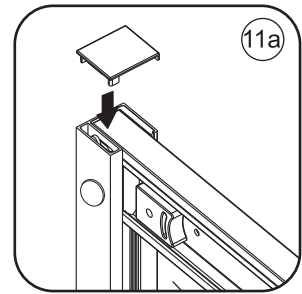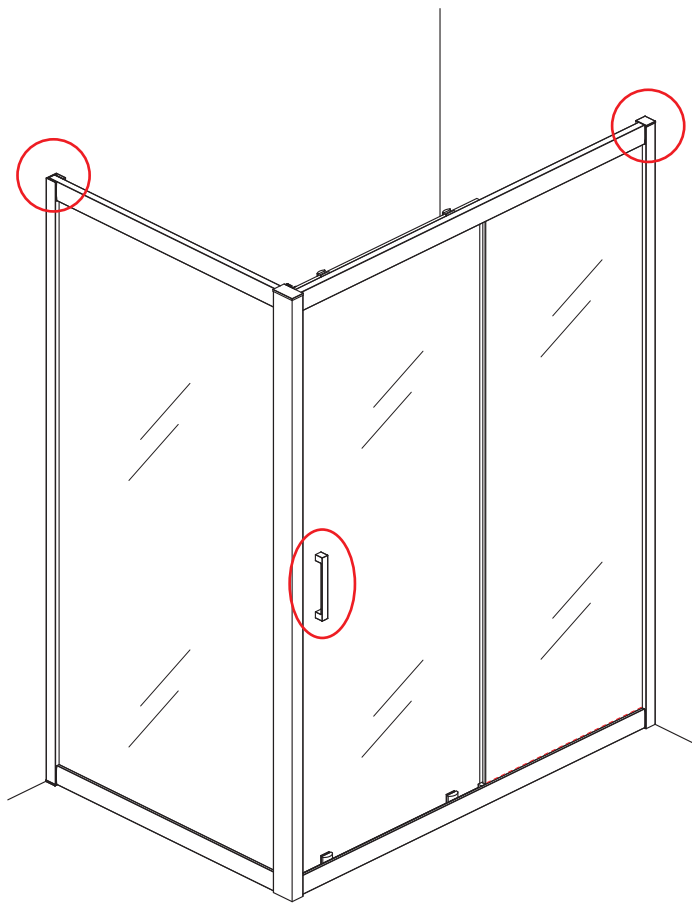

Voorzie alen de buitenzijde van de cabine van siliconenkit.

