INSTALLATION MANUAL

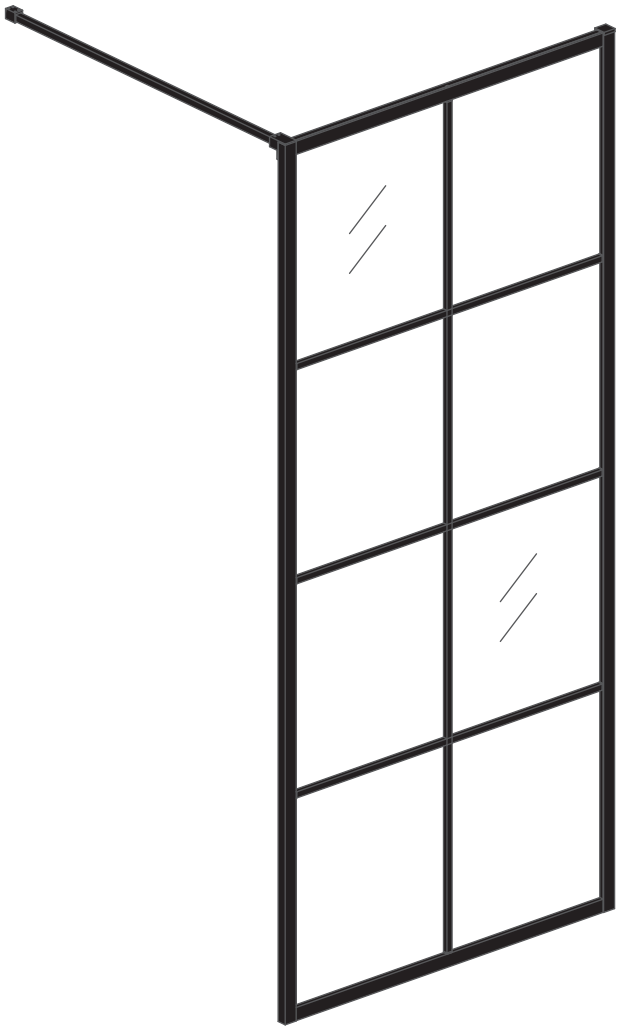

RoHS CE ISO9001:2008

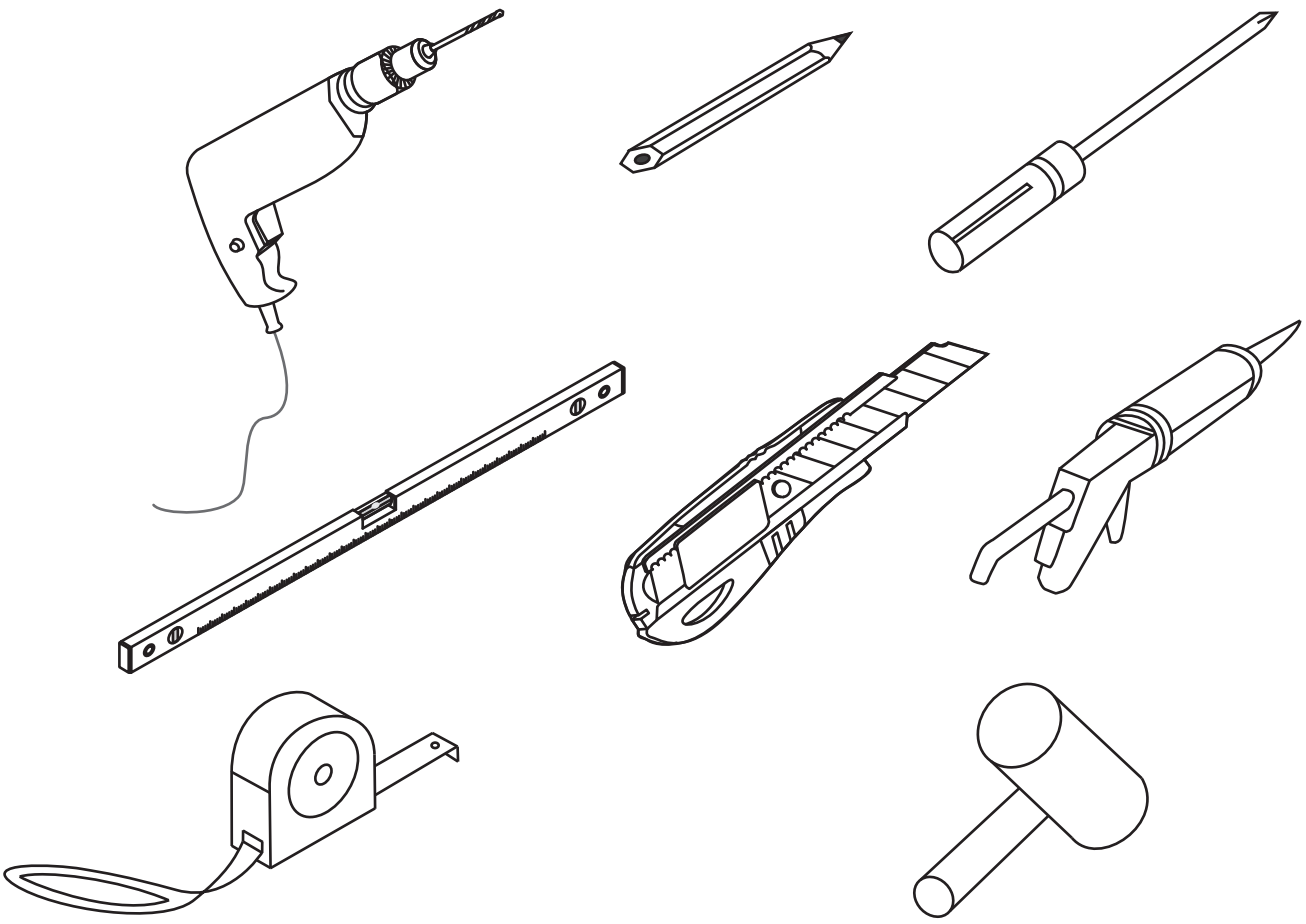

X1
PJ-4230


X1
LG-04

X1
PJ-4207

X1
PJ-4206

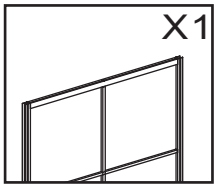
X1
GLASS

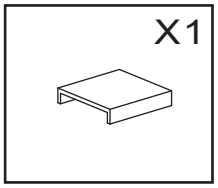
X1
KQ-47cover

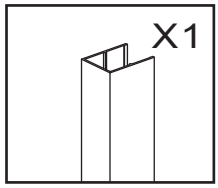
X1
BK-25

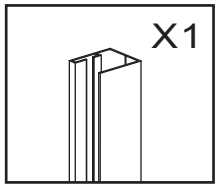
X1
KQ-47

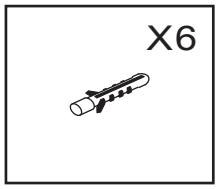
X6
PJ-4606

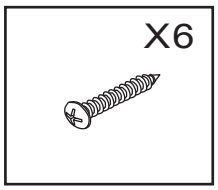
X6

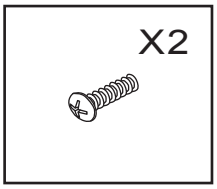
X2

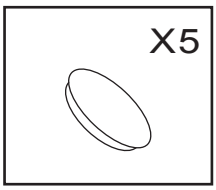
X5

Drawing the install size.

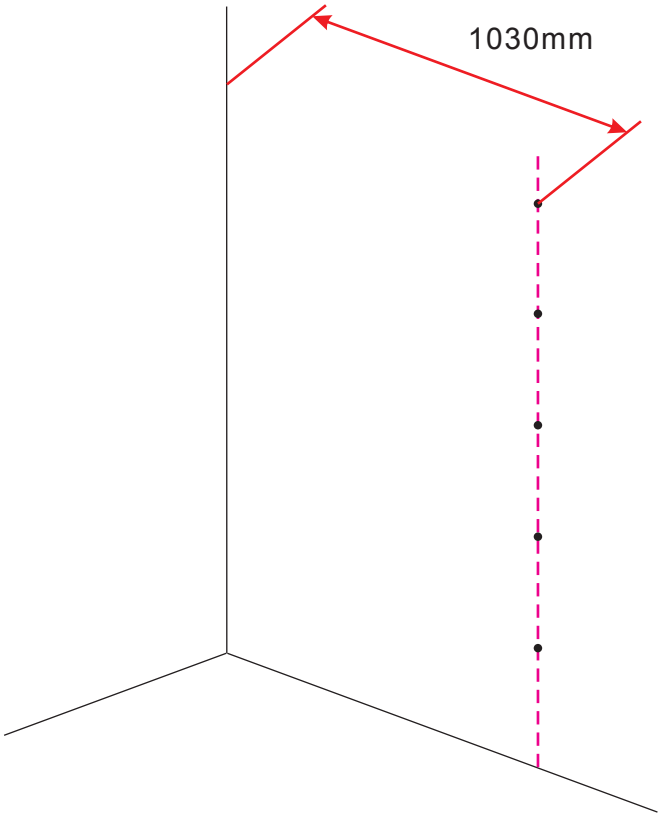

1

Install the wall profile.

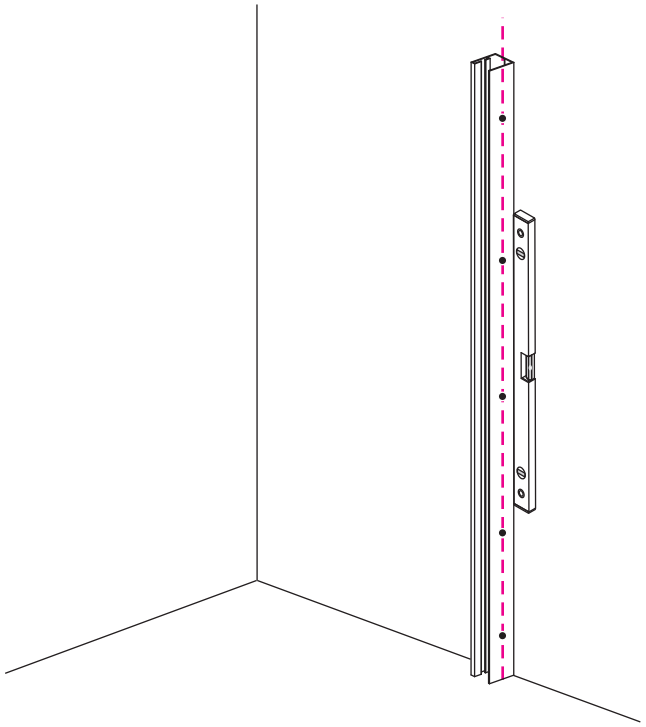

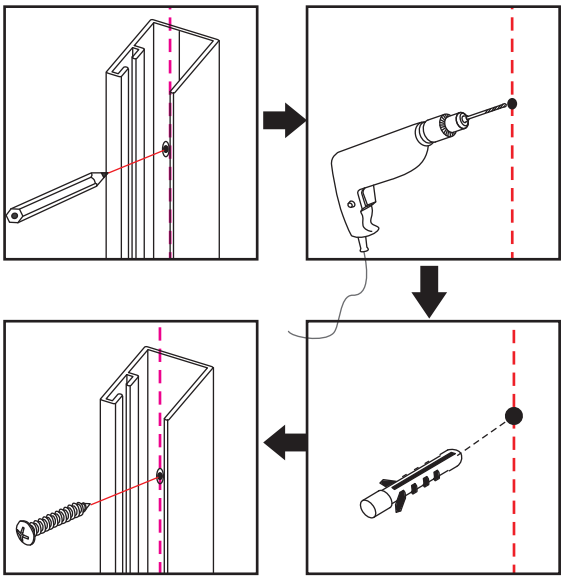

2

Install the fixed glass.

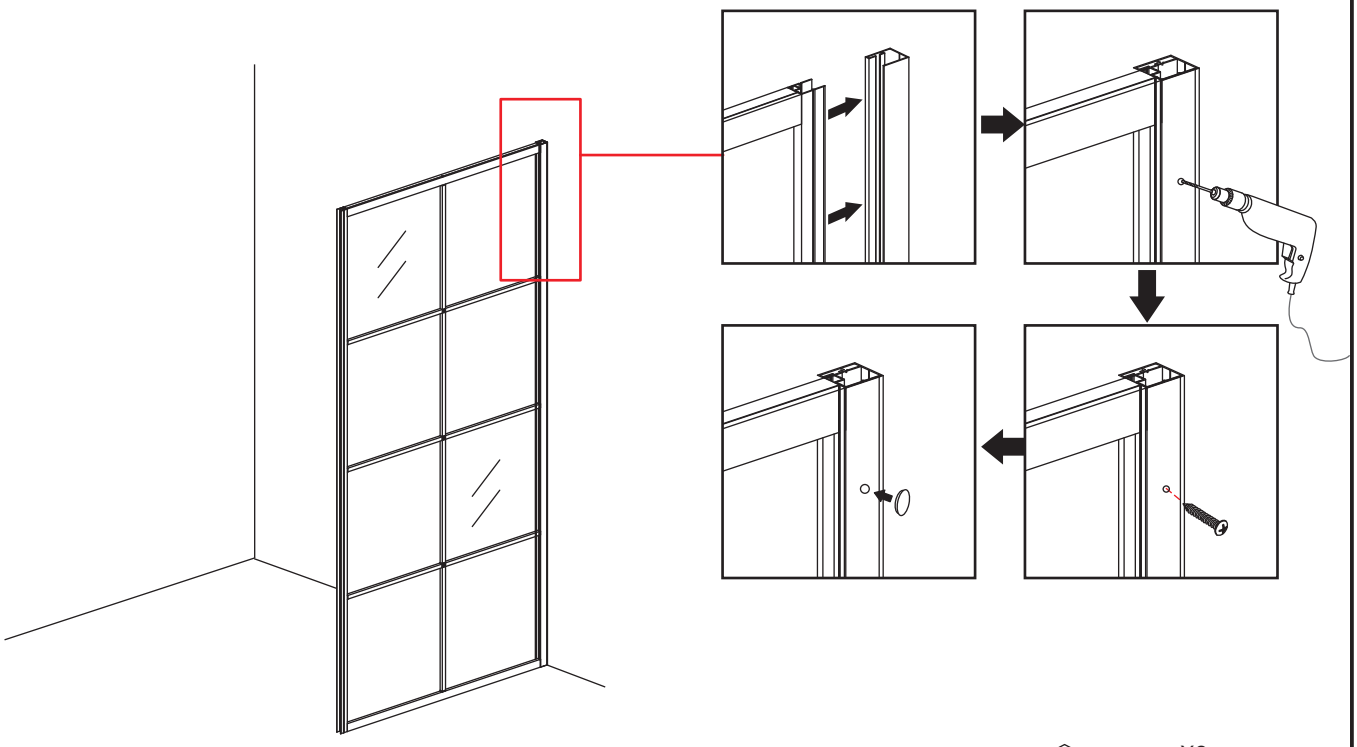





3

Install the frame profile of broadside fixed glass.

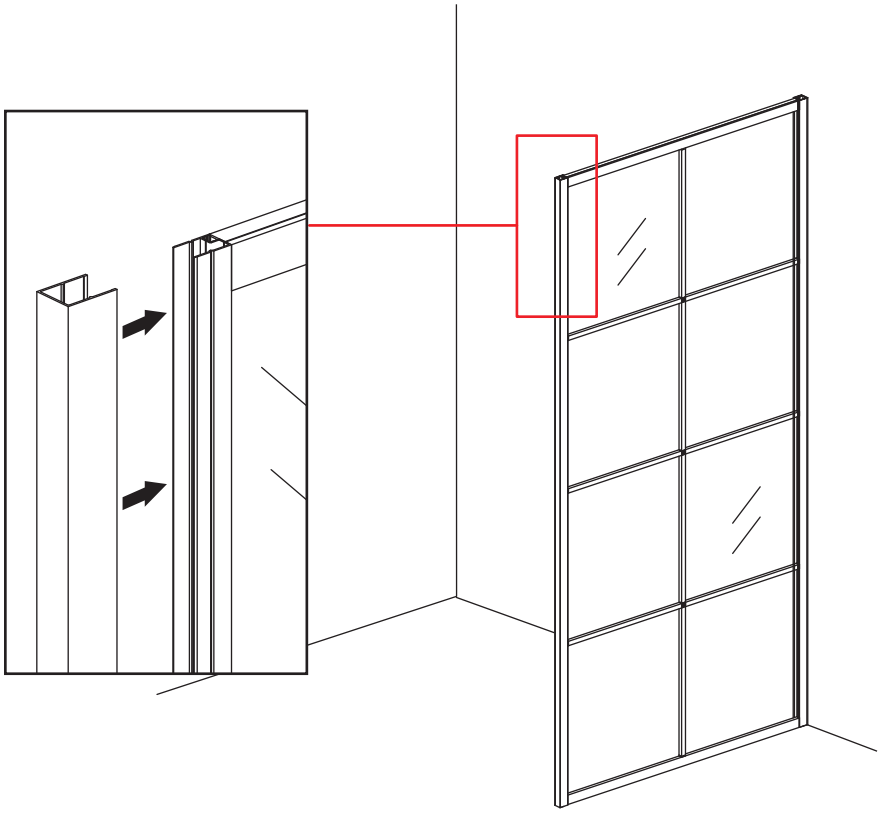

4

Install the support bar on the wall.

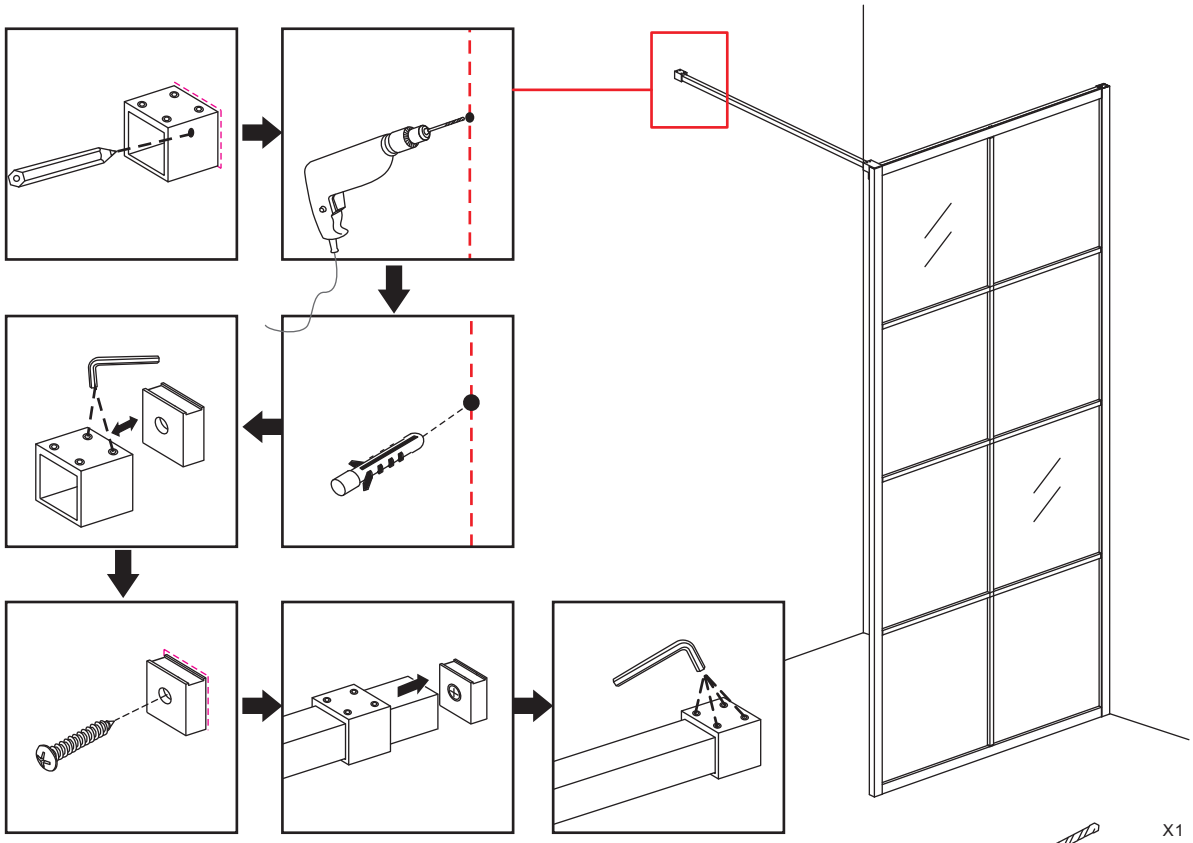



5

Install the support bar part on glass.

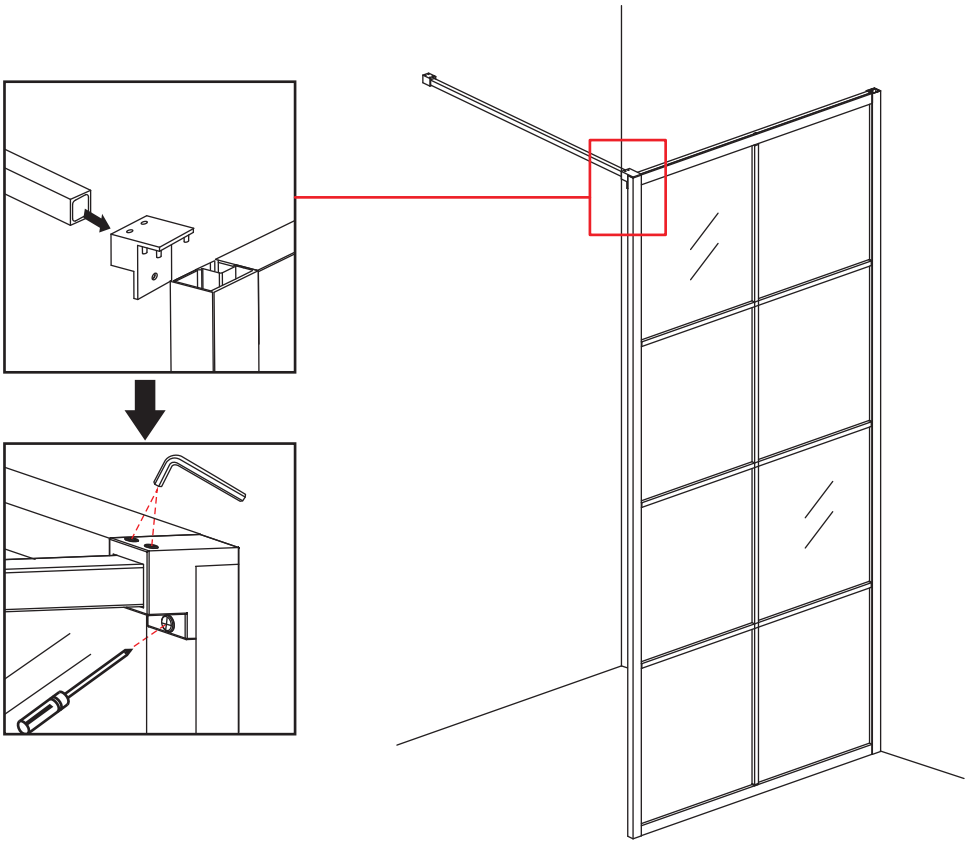

6

Install the top decorate part.

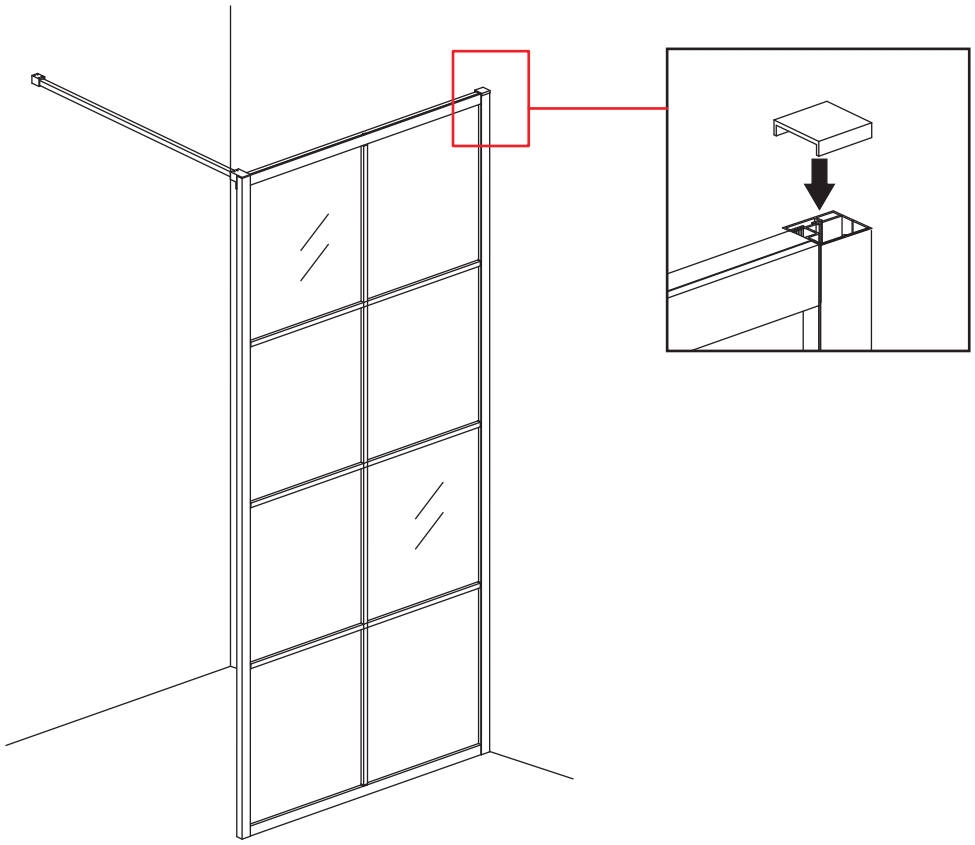

7

Make the glass gel then make sure without shower in 24hours.

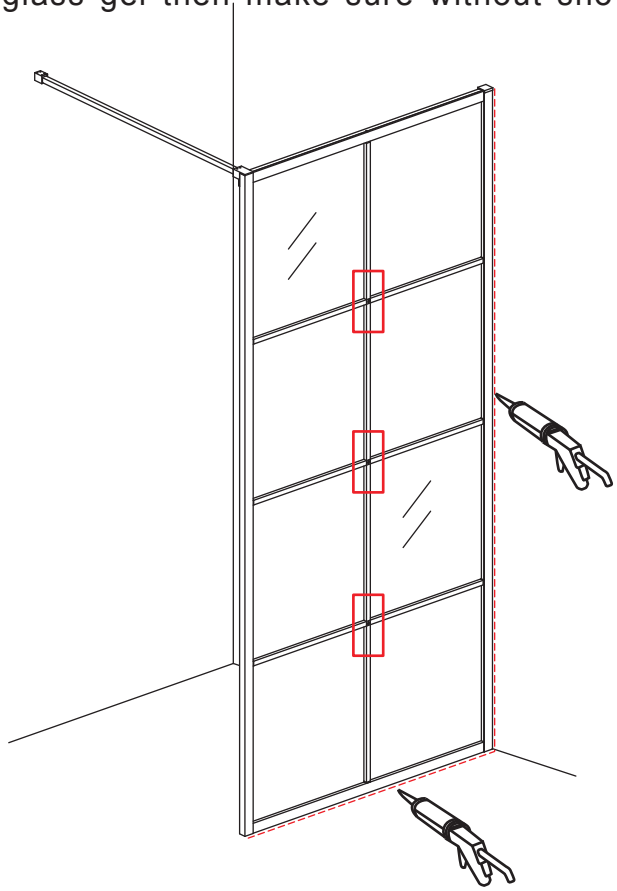

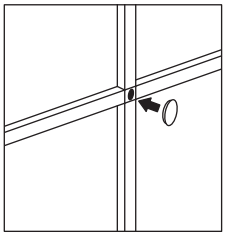

8